

OPERATING INSTRUCTIONS CAT. 1061 UTILISHELF





Instructions:

Opening the shelf

- 1. Grab Handle.
- 2. Attach the magnetic part of the shelf on a metal surface or secure the shelf with the hooks.
- **3.** To open the shelf, slide one half of the handle to the left.

Removing the shelf

- Close the Unit.
- Grasp both lower corners.
- Pull towards you.

Warranty Information

TESCO warrants that the units fabricated by TESCO shall be free from defects in material and workmanship at the time of delivery and for one year from the date of delivery (unless Diamond Level Support is selected). If any such item should prove to be defective in material or workmanship under normal intended usage and maintenance during the warranty period, after examination by personnel from TESCO and the Customer, then TESCO shall repair or replace, at its option, such defective item at its expense. This coverage includes parts and labor. Travel expenses for repairs will be invoiced at cost plus a 10% administrative fee.