

## **OPERATING INSTRUCTIONS - CATALOG NO. 646 PHASE ANGLE METER**

## **Description:**

The TESCO Phase Angle Meter is a self contained portable device which requires no auxiliary equipment for its operation and furnishes a quick and direct method of checking relay and instrument connections.

## **Operation:**

- Determine voltage of service
- Determine load amperage
- Connect voltage and current leads to potential source and load current according to your companies testing procedures.
- Phase angle will indicate the phase difference between potential source and load current. (Note: current lags voltage)

## **Specifications:**

- Voltage Inputs: 69V,120V, 240V, & 480V +/- 10%
- Current Inputs: 1A, 2.5A, & 5A +20% / -50%
- Phase Angle: 0-359 deg +/- 1% current lags voltage
- Replace potential fuse with MDL <sup>1</sup>/<sub>4</sub> amp fuse(or equivalent)
- Replace current fuse with AGC 7 1/2 amp fuse (or equivalent)