



THE EASTERN SPECIALTY COMPANY

OPERATIONS

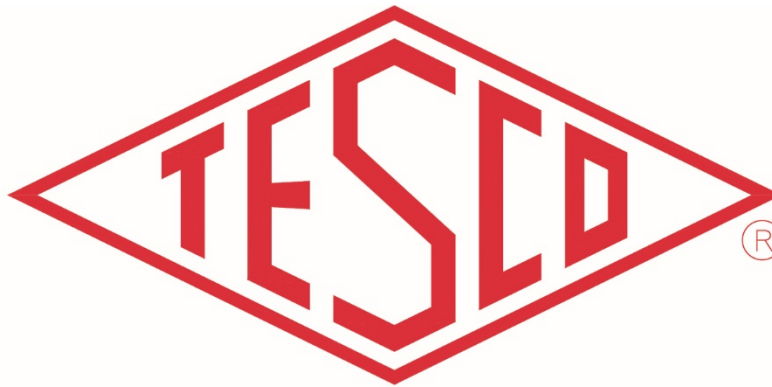
MANUAL

METER SITE ANALYZER

PRODUCT:

CATALOG NO. 6330

METER SITE ANALYZER OPERATIONS MANUAL CATALOG NO. 6330



THE EASTERN SPECIALTY COMPANY

© 2020 TESCO - The Eastern Specialty Company

All Rights Reserved.

Specifications are subject to change without prior notice.

Revision: 1.0

TESCO – The Eastern Specialty Company

925 Canal Street Bristol, PA, 19007

Phone: 215.228.0500

support@tescometering.com

www.tescometering.com

LIMITED WARRANTY& LIMITATION OF LIABILITY

TESCO warrants to the original purchaser that it will correct all defects in material and/or workmanship in the Instrument, test equipment or software covered by this warranty (herein called "**PRODUCT**"), provided that TESCO is notified of such defect within the warranty period (set forth below) in accordance with paragraph four of this Warranty.

WARRANTY PERIOD. The warranty period shall begin on the date of shipment of the **PRODUCT** or the date of the issuance of this warranty certificate, whichever is later. If no warranty period is specified below and signed by an authorized **DISTRIBUTOR** of TESCO, the Warranty Period shall be one (1) year. In no event shall this Warranty remain in effect for more than the stated Warranty Period plus two (2) months after the date of shipment. TESCO's sole obligation and the purchaser's sole remedy under this Warranty is limited to repair or replacement, at TESCO's option, free of charge, F.O.B. TESCO's factory at Bristol, PA of any workmanship and/or part which in TESCO's sole judgment displays evidence of defect. On-site Warranty repairs will be made when in TESCO's judgment the **PRODUCT** cannot practically be shipped to TESCO's factory. Any modifications, additions or upgrades made to the **PRODUCT** or control software after this warranty becomes effective shall not extend the term of this warranty.

COVERAGE. The warranty set forth above shall be applicable only if the **PRODUCT**:

1. Is used for the specific purpose for which it was intended;
2. Is operated in accordance with instructions, if any, supplied by TESCO;
3. Has not been modified, neglected, altered, tampered with, vandalized, abused or misused, or subjected to accident, fire, flood or other casualties;
4. Has not been repaired by unauthorized persons;
5. Has not had its serial number altered, defaced or removed;
6. Has not been connected, installed or adjusted other than in accordance with the instructions, if any, furnished by TESCO.

The warranty set forth herein DOES NOT APPLY to defects resulting from ordinary wear, tear and usage, or any cause, similar or dissimilar, not resulting solely from defective material and/or workmanship.

The Warranty set forth herein shall NOT be effective unless:

1. Notice of defect is given to TESCO by phone, fax, email or mail as soon as the defect is discovered.
2. Notice of defect contains the following information: PRODUCT serial number, PRODUCT model number, date of original installation, and an accurate and complete description of the defect including the exact circumstances leading to the defect.
3. The defective PRODUCT or part is returned only upon authorization from TESCO as evidenced by the issuing of a Return Merchandise Authorization (RMA) number, and that the transportation charges are prepaid (except that TESCO may, at its option, appoint a qualified DISTRIBUTOR to make field inspections of the PRODUCT for which purpose the purchaser shall permit such DISTRIBUTOR to enter upon its premises and examine the PRODUCT).
4. The Return Merchandise Authorization (RMA) number is written on the shipping label and all paperwork defective PRODUCT or part.
5. The defective PRODUCT or part is returned in the original packing or packing approved by TESCO

TESCO is not responsible for drayage charges, damages or labor costs incurred in conjunction with failure, removal or reinstallation of any PRODUCT, all of which shall be at the purchaser's expense. TESCO is not responsible for special, incidental or consequential damages, whether resulting from breach of warranty, negligence or any other reason.

TESCO manufactured parts will be available for a minimum period of at least two years after the manufacture of a PRODUCT has been discontinued.

TESCO will provide original purchaser during the Warranty Period, unlimited telephone consulting time for the purpose of PRODUCT trouble shooting/servicing and for the first thirty (30) days of the Warranty Period, unlimited telephone consulting time for the purpose of PRODUCT/software application.

THE WARRANTY CONTAINED HEREIN IS IN LIEU OF ALL OTHER WARRANTIES AND TESCO MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OR CONDITION, DESIGN, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ANY OTHER MATTER.

No other Warranty, express or implied, is authorized by TESCO, and no DISTRIBUTOR of TESCO or any other person has any authority to amend, extend, modify, enlarge or otherwise alter the foregoing warranty and disclaimers in any way whatsoever, except as provided for in an Extended Limited PRODUCT Warranty Agreement.

TABLE OF CONTENTS

1.0 INTRODUCTION	1
1.1 Introduction	2
1.2 Contacting TESCO.....	2
1.3 General Safety Summary.....	3
1.4 Description of Safety-related Icons.....	3
1.5 Product Features	4
1.5.1 Key Features	4
1.5.2 Standard Features.....	4
1.5.3 Standard Unit.....	4
1.5.4 Additional Items.....	4
1.5.5 Optional Accessories	5
1.6 General Specifications.....	5
1.6.1 Input Characteristics	5
1.6.2 Dimensions	5
1.6.3 Accuracy.....	5
1.7 About this Operations Manual	6
2.0 SETUP	6
2.1 Introduction	7
2.2 Unpacking and Inspection	7
2.3 Setup, Airflow and Cooling Considerations	7
2.3.1 Setup and Placement	7
2.4 Main Power Supply.....	7
3.0 FUNCTIONALITIES	8
3.1 Introduction	10
3.2 Panel Features	10
3.2.1 Front Panel Sections	10
3.2.2 Side Panel Sections.....	11
3.2.3 Front Panel Buttons.....	11
3.3 The Graphical User Interface (GUI)	12
3.3.1 GUI Screen Sections.....	12
3.3.2 Main Menu.....	13

3.3.2.1 Manual Mode	16
3.3.2.1a Meter Test	17
3.3.3.1b CT Testing	20
3.3.3.1c Pulse Alignment Check	25
3.3.2.2 Sequence Testing	26
3.3.2.3 Database.....	27
3.3.2.3a New/Edit Site	28
3.3.2.3b New/Edit Meter	29
3.3.2.3c New/Edit CT	30
3.3.2.3d New/Edit Customer	31
3.3.2.3e Test Results.....	31
3.3.2.3f Data Library.....	Error! Bookmark not defined.
3.3.2.3g Test Sequences	32
3.3.2.4 Preferences.....	33
3.3.2.4a Network/Security Options.....	33
3.3.2.4b Colors/Beepers Options.....	34
3.3.2.4c General Options.....	34
3.3.2.4d Testing Options	35
3.3.2.5 System Information.....	35
3.3.2.5a User.....	36
3.3.2.5b Temperature	36
3.3.2.5c Configuration	37
3.3.2.5d Serial Numbers	37
3.3.2.5e Software Versions	38
3.3.3 Fast Access Functions	13
3.3.3a Metrology	13
3.3.3b Phasors	14
3.3.3c Waveforms.....	14
3.3.3d Harmonics.....	15
4.0 CONFIGURATIONS.....	39
4.1 Meter Test.....	40
4.2 CT Test.....	40
4.3 Sequence Test	42

5.0 MAINTENANCE	43
5.1 Introduction	44
5.2 Cleaning the Instrument External Surface.....	44
5.3 Repair / Parts Replacement / Recalibration.....	44

1.0 INTRODUCTION

1.1 Introduction	2
1.2 Contacting TESCO.....	2
1.3 General Safety Summary.....	3
1.4 Description of Safety-related Icons.....	3
1.5 Product Features	4
1.5.1 Key Features	4
1.5.2 Standard Features.....	4
1.5.3 Standard Unit.....	4
1.5.4 Additional Items.....	4
1.5.5 Optional Accessories	5
1.6 General Specifications.....	5
1.6.1 Input Characteristics	5
1.6.2 Dimensions	5
1.6.3 Accuracy.....	5
1.7 About this Operations Manual	6

1.1 Introduction

The most versatile Site Testing tool in a small, lightweight package!

Studies have shown that at transformer-rated sites, the vast majority of issues are related to wiring, CTs, PTs, and other issues. If you want to be sure the customer is billed correctly and you are not losing revenue, you must test the whole site, not just the meter — this is where TESCO's Meter Site Analyzer (Catalog No. 6330) comes in.

The 6330 revolutionizes meter site testing by providing a small, lightweight package!

It is the most versatile and complete tool for testing the entire functionality of transformer-rated metering installation in a convenient, portable, and lightweight kit. It can perform CT Testing (Ratio, Burden Only, Admittance), Demagnetization, Demand Testing, Customer Load or Phantom Load Testing (5-amp Current Load Box), and more! It has a database for storing test results that you can export to your PC.

Since 1904, customers have trusted TESCO for accuracy and reliability. When you think metering, think TESCO.

CAT. 6330 will be referred as "Site Analyzer" throughout the operational manual.

1.2 Contacting TESCO

For Technical Support or Calibration/Repair, please call 215.228.0500.

You can also send an email to **support@tescometering.com** with any questions.

To view, print, or download the latest manual supplement, visit **www.tescometering.com**.

1.3 General Safety Summary

This manual contains information and warnings that must be observed to ensure safe operation and keep the Site Analyzer in a safe condition. Operation or service in conditions or in a manner other than specified could compromise safety. For the correct and safe use of this device, **it is essential that both operating and service personnel follow accepted safety procedures in addition to the safety precautions specified**, including proper PPE guidelines.



In this manual, a **WARNING** identifies conditions and actions that pose hazard(s) to the user, while a **CAUTION** identifies conditions and actions that may damage the Site Analyzer or the test equipment.

WARNING

To avoid electrical shock, personal injury, or fire hazard:

- The device must not be switched ON if it is damaged or suspected to be faulty.
- Do not operate the device in wet, condensing, dusty, or explosive gas conditions.
- If the equipment is used in a manner not specified in this manual, the protection provided by the Site Analyzer may be impaired.
- Whenever it is likely that safety protection has been impaired, the device must be made inoperative and be secured against any unintended operation. Inform qualified maintenance or repair personnel.
- Safety protection is likely to be impaired if, for example, the Site Analyzer displays visible damage or fails to operate normally.

1.4 Description of Safety-related Icons

ICONS	DESCRIPTION
	Risk of danger. Important information. See manual.
	Hazardous voltage. Risk of electrical shock.

1.5 Product Features

1.5.1 Key Features

- **Voltage Drive:** 50-650V, 920V peak
- **Current Drive:** 0.1-21A, 30A peak
- **Meter Testing (Demand, Timed Run, Timed Register, Energy Delivery)**
- **CT Testing (Ratio, Burden Only, Ratio and Burden, Admittance, Demagnetization)**
- **Meter Accuracy Testing (T. A. is 5 amp)**
- **“Fast Key” Anytime Data (Metrology, Phasor Diagrams, Live Waveforms, Harmonics up to 50th)**

1.5.2 Standard Features

- **GRAPHICAL USER INTERFACE (GUI)**
Displayed on a 7” 800x480, 1,000 nit color display; readable on direct sunlight
- **ETHERNET CONNECTIVITY**
100 BaseT with support for: Web Services, Remote Control, Database Access. 7” RJ45 standard (blue) and crossover (red) cables are provided.
- **INTEGRATED CONTROL KEYPAD**
The keypad is embedded in the front panel.
- **LOAD BOX**
True three-phase with current of 0-5A with full harmonics.

1.5.3 Standard Unit

These are the standard items included in the package:

- 6330 TESCO Meter Site Analyzer
- Optical pickup (1037-SA) with 9.84 ft. cable, Next Gen compatible
- Battery charger (90W 19VDC output, 85 -264VAC input with 6 ft. cord)

1.5.4 Additional Items

These items are necessary for the unit to fully function and have a few varieties to choose from:

- Jumper Sets
- Current Cable Sets
- Voltage Cable Sets
- Test Clips for Voltage
- Rogowski Coil(s)

1.5.5 Optional Accessories

- SENSORLINK high voltage probe
- 50 ft. extension cables for Rogowski coils
- Diamond Level Support

1.6 General Specifications

1.6.1 Input Characteristics

PARAMETERS	DATA
Supply Frequency	50/60Hz
Power Supply Adaptor Output	19VDC, 4.74A
Power	90W Max.

1.6.2 Dimensions

PARAMETERS	DATA
Height	Lid closed: 6.7" (17.01 cm)
Width	13.9" (35.30 cm)
Depth	18.2" (46.22 cm)
Weight	17.8 lbs (8.07 kg)

1.6.3 Accuracy

PARAMETERS	DATA
Voltage Measurement Accuracy	±0.02%
Current Measurement Accuracy	±0.02%
Phase	±0.005 degrees
Power Measurements Accuracy (Watts / VA / VAR)	±0.04%, ±0.02% typical
Energy Measurements Accuracy (WHrs / VAHrs / VARHrs)	±0.04%, ±0.02% typical
Probe Channels	±0.02%

1.7 About this Operations Manual

This manual provides complete information for setting up and operating the Site Analyzer. This document instructs the user on the following operations of the CAT. 6330:

- Setup
- Front Panel Features
- Graphical User Interface (GUI)
- How to perform tests
- Instrument Maintenance

2.0 SETUP

2.1 Introduction 7

2.2 Unpacking and Inspection 7

2.3 Setup, Airflow and Cooling Considerations 7

 2.3.1 Setup and Placement 7

2.4 Main Power Supply..... 7

2.1 Introduction

This chapter provides instructions for unpacking and the proper setup for the Site Analyzer. Read this chapter before you operate the Site Analyzer. Instructions for cable connections can be found here.

2.2 Unpacking and Inspection

The Site Analyzer is shipped in a container designed to prevent damage during shipping.

Inspect the Site Analyzer carefully for damage, and immediately report any damage to the shipper. A packing list is included in the packaging. When you unpack the Site Analyzer, check for all the standard equipment listed and check the shipping order for any additional items ordered. Report any shortage to the place of purchase, your distributor, or directly to TESCO.

2.3 Setup, Airflow and Cooling Considerations

2.3.1 Setup and Placement

The Site Analyzer is a versatile and portable unit that you can easily adapt to your surroundings, on a site or inside the shop. The long cords allow for the placement for a Site Analyzer to be as close or as far from the site as possible.

Make sure to lay the Site Analyzer flat when using, and make sure there is proper ventilation for the fans on the side.



2.4 Main Power Supply

The Site Analyzer is fully battery powered and the battery can be charged in or outside of the unit from AC or DC. The battery can easily be swapped out. Additional chargers are available for purchase from TESCO or your distributor.

WARNING

To avoid electrical shock, personal injury, or fire hazard, connect the factory-supplied three-conductor-line power cord to a properly grounded power outlet.

During test operation, a two-conductor adapter or extension cord MUST NOT be used. This will break the protective ground connection and will affect the measurement accuracy of the Site Analyzer.

The power outlets supplying the Site Analyzer system should be controlled by an emergency switch so that power can be switched off if a hazard arises.

3.0 FUNCTIONALITY

3.1 Introduction	10
3.2 Panel Features	10
3.2.1 Front Panel Sections	10
3.2.2 Side Panel Sections	11
3.2.3 Front Panel Buttons	11
3.3 The Graphical User Interface (GUI)	12
3.3.1 GUI Screen Sections	12
3.3.2 Main Menu	13
3.3.2.1 Manual Mode	16
3.3.2.1a Meter Test	17
3.3.2.1b CT Testing	20
3.3.2.1c Pulse Alignment Check	25
3.3.2.2 Sequence Testing	26
3.3.2.3 Database	27
3.3.2.3a New/Edit Site	28
3.3.2.3b New/Edit Meter	29
3.3.2.3c New/Edit CT	30
3.3.2.3d New/Edit Customer	31
3.3.2.3e Test Results	31
3.3.2.3f Data Library	Error! Bookmark not defined.
3.3.2.3g Test Sequences	32
3.3.2.4 Preferences	33
3.3.2.4a Network/Security Options	33
3.3.2.4b Colors/Beepers Options	34
3.3.2.4c General Options	34
3.3.2.4d Testing Options	35
3.3.2.5 System Information	35
3.3.2.5a User	36
3.3.2.5b Temperature	36

3.3.2.5c Configuration	37
3.3.2.5d Serial Numbers	37
3.3.2.5e Software Versions	38
3.3.3 Fast Access Functions	13
3.3.3a Metrology	13
3.3.3b Phasors	14
3.3.3c Waveforms.....	14
3.3.3d Harmonics.....	15

3.1 Introduction

This chapter is a reference for the functions and locations of the Site Analyzer’s front panel features and provides brief descriptions of each feature for quick access. **Please read this information before operating the Site Analyzer.** Front panel operating instructions for the Site Analyzer are provided in this chapter.

3.2 Panel Features

Front panel features (controls, displays, indicators) and side panel sections (terminals) are shown in Figure 3.2.1 and Figure 3.2.2 respectively.

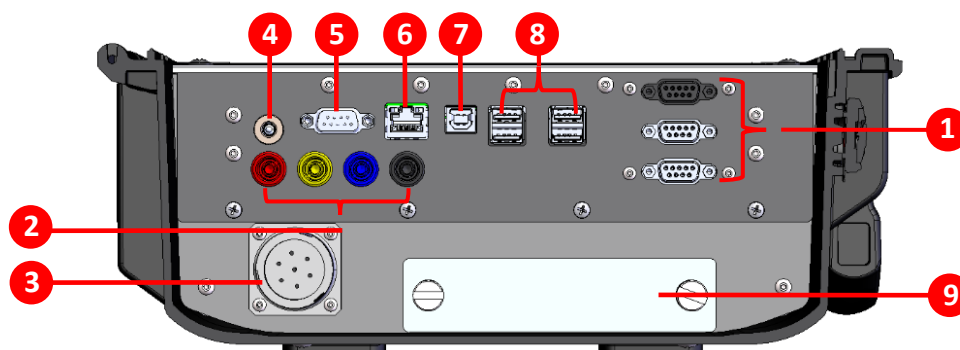
3.2.1 Front Panel



NUMBER	DESCRIPTION
1	LCD screen
2	Function keys
3	Keypad
4	Fast access keys
5	Power button
6	Navigation buttons

Table 3.2.1. CAT. 6330 Front Panel Sections

3.2.2 Side Panel








NUMBER	DESCRIPTION
1	Rogowski Current Probe Terminals
2	Fused Voltage Lead Terminals
3	Current Cable Terminal
4	Battery Charger Input Terminal
5	Optical Pickup Terminal
6	Ethernet Communication
7	USB type-B port
8	USB type-A ports
9	Battery Compartment

Table 3.2.2. CAT. 6330 Side Panel Sections

3.2.3 Front Panel Buttons

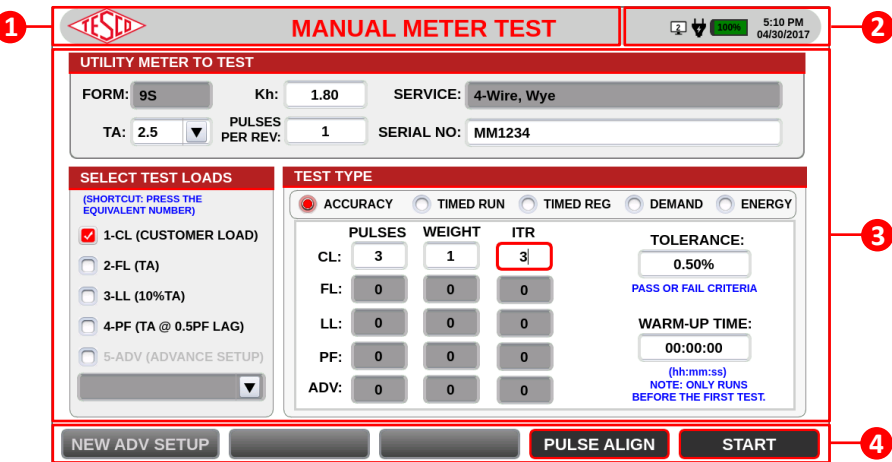
SYMBOL	DESCRIPTION
	<ul style="list-style-type: none"> • Selects the NEXT or PREVIOUS menu item • Moves the SELECTED LINE UP or DOWN • Selects an Item from a dropdown menu
	<ul style="list-style-type: none"> • Moves the cursor left/right of the current character in text boxes. • Moves the selection left/right of the current selected cell in tables.
	Selects the NEXT or PREVIOUS TAB item.
	Moves the focus from one section of the screen to another
	Displays many of the metrology values in tabular form.
	Displays a phasor diagram for the active phases. Diagram is continuously updated.
	Displays live waveforms.
	Displays harmonic analysis up to the 50 th .
	Deletes the previous character.

	Returns to the previous screen.
	Function keys
	Power button. Hold down to turn the device on until the LED lights up and wait for a few seconds for the screen to load.
	Selects a response.
	Provides context-sensitive help.

3.3 The Graphical User Interface (GUI)

3.3.1 GUI Screen Sections

The user interface is divided into four sections. In the screen, any field or button that is grayed out cannot be changed or accessed by the user.






NUMBER	DESCRIPTION
1	Screen Title
2	Status Bar
3	Screen Data
4	Function Buttons

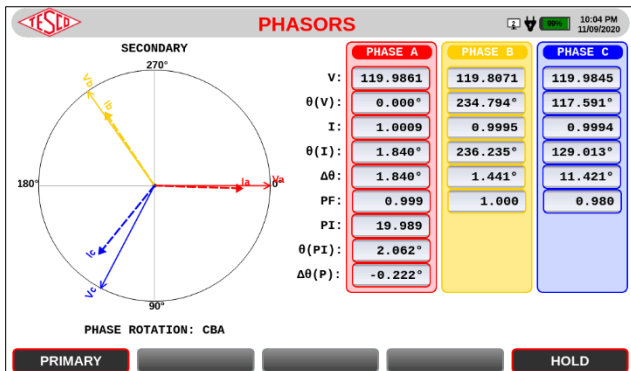
Table 3.3.1. CAT. 6330 GUI Sections

STATUS BAR ICONS

These icons are located at the status bar of the screen. They are indicators of different network connections and temperature levels of the device.

ICON	NAME	DESCRIPTION
	Wired Connection	LAN/Ethernet connection is enabled. The number represents the number of users remotely connected to the device.
	Extremely Hot Temperature	The Site Analyzer's temperature is above 158°F (70°C).
	Charging	The Site Analyzer is charging.


3.3.2b Phasors

SCREEN	DESCRIPTION																					
<div></div>	<p>Displays a phasor diagram for the active phases. Diagram is continuously updated.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><tr><td>F1</td><td>PRIMARY</td><td>Switch to the primary reading.</td></tr><tr><td></td><td>SECONDARY</td><td>Switch to the secondary reading.</td></tr><tr><td>F2</td><td></td><td></td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td></td><td></td></tr><tr><td>F5</td><td>HOLD</td><td>Freeze the data acquisition.</td></tr><tr><td></td><td>LIVE</td><td>Change to showing live data.</td></tr></table>	F1	PRIMARY	Switch to the primary reading.		SECONDARY	Switch to the secondary reading.	F2			F3			F4			F5	HOLD	Freeze the data acquisition.		LIVE	Change to showing live data.
F1	PRIMARY	Switch to the primary reading.																				
	SECONDARY	Switch to the secondary reading.																				
F2																						
F3																						
F4																						
F5	HOLD	Freeze the data acquisition.																				
	LIVE	Change to showing live data.																				

3.3.2c Waveforms

SCREEN	DESCRIPTION																		
<div></div>	<p>Displays live waveforms with recording functionality.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><tr><td>F1</td><td>HIDE V</td><td>Hide or show the voltage waveforms.</td></tr><tr><td>F2</td><td>HIDE I</td><td>Hide or show the current waveforms.</td></tr><tr><td>F3</td><td>N CYCLES</td><td>Select the number of cycles to be displayed: 1, 2, 4, 8</td></tr><tr><td>F4</td><td>PHASE A</td><td>Shift between ALL, Phase A, Phase B and Phase C.</td></tr><tr><td>F5</td><td>HOLD</td><td>Freeze the data acquisition.</td></tr><tr><td></td><td>LIVE</td><td>Change to showing live data.</td></tr></table>	F1	HIDE V	Hide or show the voltage waveforms.	F2	HIDE I	Hide or show the current waveforms.	F3	N CYCLES	Select the number of cycles to be displayed: 1, 2, 4, 8	F4	PHASE A	Shift between ALL, Phase A, Phase B and Phase C.	F5	HOLD	Freeze the data acquisition.		LIVE	Change to showing live data.
F1	HIDE V	Hide or show the voltage waveforms.																	
F2	HIDE I	Hide or show the current waveforms.																	
F3	N CYCLES	Select the number of cycles to be displayed: 1, 2, 4, 8																	
F4	PHASE A	Shift between ALL, Phase A, Phase B and Phase C.																	
F5	HOLD	Freeze the data acquisition.																	
	LIVE	Change to showing live data.																	

3.3.3 Main Menu

SCREEN	DESCRIPTION																					
<div></div>	<p>The MAIN MENU contains the core functions of the device. A site can be selected using the SITE dropdown box. Clicking the GPS LOCATE button will narrow the choices for SITE to those at the current GPS location.</p> <p>If only one site is found, that site will be loaded. If the correct site is not found, then you have a choice of going to the DATABASE and creating a site or testing in MANUAL mode.</p> <p>If no site is selected, then tests can be performed in MANUAL mode, but data cannot be saved to the results database.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><tr><td>F1</td><td>MANUAL</td><td>Perform Meter Test, CT Test, or Pulse Alignment Check</td></tr><tr><td>F2</td><td>SEQUENCE</td><td>Preform a test sequence</td></tr><tr><td>F3</td><td>DATABASE</td><td><ul style="list-style-type: none">Create/View/Edit information in the database: sites, test results, data library, and test sequences</td></tr><tr><td>F4</td><td>PREFERENCES</td><td>Open the PREFERENCES MENU screen</td></tr><tr><td>F5</td><td>SYSTEM</td><td>Open the SYSTEM MENU screen</td></tr></table> <p>Press  to return to the previous screen.</p> <p>DATA</p> <table><tr><td>SITE</td><td>Choose an existing site configuration.</td></tr><tr><td>FORM</td><td>Meter form, will be loaded automatically if site is selected</td></tr><tr><td>SERVICE</td><td>Services/wiring configurations available for selected meter form. This will be loaded automatically if a site is selected.</td></tr></table>	F1	MANUAL	Perform Meter Test, CT Test, or Pulse Alignment Check	F2	SEQUENCE	Preform a test sequence	F3	DATABASE	<ul style="list-style-type: none">Create/View/Edit information in the database: sites, test results, data library, and test sequences	F4	PREFERENCES	Open the PREFERENCES MENU screen	F5	SYSTEM	Open the SYSTEM MENU screen	SITE	Choose an existing site configuration.	FORM	Meter form, will be loaded automatically if site is selected	SERVICE	Services/wiring configurations available for selected meter form. This will be loaded automatically if a site is selected.
F1	MANUAL	Perform Meter Test, CT Test, or Pulse Alignment Check																				
F2	SEQUENCE	Preform a test sequence																				
F3	DATABASE	<ul style="list-style-type: none">Create/View/Edit information in the database: sites, test results, data library, and test sequences																				
F4	PREFERENCES	Open the PREFERENCES MENU screen																				
F5	SYSTEM	Open the SYSTEM MENU screen																				
SITE	Choose an existing site configuration.																					
FORM	Meter form, will be loaded automatically if site is selected																					
SERVICE	Services/wiring configurations available for selected meter form. This will be loaded automatically if a site is selected.																					

3.3.3.1 Manual Mode

SCREEN	DESCRIPTION																					
<div><div>MANUAL MODE</div><div></div></div>	<p>Manual Mode allows testing without specifying a site or test sequence. If a site was selected on the MAIN MENU, then the information on this screen will automatically be filled in. If no SITE was selected, then one can be selected here, or just a meter form and service can be manually set.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><tr><td>F1</td><td>MANUAL</td><td>Perform a meter test.</td></tr><tr><td>F2</td><td>CT TEST</td><td>Perform a CT test.</td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td></td><td></td></tr><tr><td>F5</td><td>PULSE ALIGN</td><td>Perform to check pulse alignment. See section 3.3.2.1c Pulse Alignment Check for more information.</td></tr></table> <p>Press to return to the previous screen.</p> <p>DATA</p> <table><tr><td>SITE</td><td>Choose an existing site configuration</td></tr><tr><td>FORM</td><td>Meter form, will be loaded automatically if site is selected</td></tr><tr><td>SERVICE</td><td>Services/wiring configurations available for selected meter form. This will be loaded automatically if a site is selected.</td></tr></table>	F1	MANUAL	Perform a meter test.	F2	CT TEST	Perform a CT test.	F3			F4			F5	PULSE ALIGN	Perform to check pulse alignment. See section 3.3.2.1c Pulse Alignment Check for more information.	SITE	Choose an existing site configuration	FORM	Meter form, will be loaded automatically if site is selected	SERVICE	Services/wiring configurations available for selected meter form. This will be loaded automatically if a site is selected.
F1	MANUAL	Perform a meter test.																				
F2	CT TEST	Perform a CT test.																				
F3																						
F4																						
F5	PULSE ALIGN	Perform to check pulse alignment. See section 3.3.2.1c Pulse Alignment Check for more information.																				
SITE	Choose an existing site configuration																					
FORM	Meter form, will be loaded automatically if site is selected																					
SERVICE	Services/wiring configurations available for selected meter form. This will be loaded automatically if a site is selected.																					

3.3.3.1a Meter Test

SCREEN	DESCRIPTION																																													
<div><div><div>METER TEST</div></div><div><div><div><div>MANUAL METER TEST</div><div><div>UTILITY METER TO TEST</div><div>FORM: 9S Kh: 1.80 SERVICE: 4-Wire, Wye</div><div>TA: 2.5 PULSES PER REV: 1 SERIAL NO: MM1234</div><div><div>SELECT TEST LOADS</div><div><div>1-CL (CUSTOMER LOAD)</div><div>2-FL (TA)</div><div>3-LL (10%TA)</div><div>4-PF (TA @ 0.5PF LAG)</div><div>5-ADV (ADVANCE SETUP)</div></div></div><div><div>TEST TYPE</div><div><div>ACCURACY</div><div>TIMED RUN</div><div>TIMED REG</div><div>DEMAND</div><div>ENERGY</div></div><div><div>PULSES</div><div>WEIGHT</div><div>ITR</div></div><div><div>CL: 3 1 3</div><div>FL: 0 0 0</div><div>LL: 0 0 0</div><div>PF: 0 0 0</div><div>ADV: 0 0 0</div></div><div><div>TOLERANCE: 0.50%</div><div>PASS OR FAIL CRITERIA</div><div>WARM-UP TIME: 00:00:00</div><div>NOTE: ONLY RUNS BEFORE THE FIRST TEST.</div></div></div><div><div>NEW ADV SETUP</div><div>PULSE ALIGN</div><div>START</div></div><div><div>PULSE ALIGN</div><div>METER TEST RESULT</div></div></div></div></div></div></div>	<p>Perform a meter test to determine the accuracy of the meter under different loads.</p> <p>FUNCTION KEYS:</p> <table><tr><td>F1</td><td>NEW ADV SETUP</td><td></td></tr><tr><td>F2</td><td></td><td></td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td>PULSE ALIGN</td><td>Perform to check pulse alignment. See section 3.3.2.1c Pulse Alignment Check for more information.</td></tr><tr><td>F5</td><td>START</td><td>Start the manual meter test.</td></tr></table> <p>Press to return to the previous screen.</p> <p>METER PARAMETERS</p> <table><tr><td>FORM</td><td>Form number of the meter.</td></tr><tr><td>Kh</td><td>Meter test constant.</td></tr><tr><td>SERVICE</td><td>Services/wiring configurations available for selected meter form.</td></tr><tr><td>TA</td><td>Test amp of the meter.</td></tr><tr><td>PULSES PER REV</td><td>If a meter is configured to generate multiple pulses per Kh, then this is the number of pulses per Kh.</td></tr><tr><td>SERIAL NUMBER</td><td>Serial number of the meter. This is optional.</td></tr></table> <p>TEST LOADS</p> <p>Customer voltage is used for all tests.</p> <table><tr><td>1-CL (CUSTOMER LOAD)</td><td>Uses customer load where the site analyzer is measuring the voltage signal and the current signals from both the potential and the current transformers.</td></tr><tr><td>2-FL (TA)</td><td>Load box provided current of TA at PF=1.0 is used.</td></tr><tr><td>3-LL (10%TA)</td><td>Load box provided current of 10% TA at PF=1.0 is used.</td></tr><tr><td>4-PF (TA @ 0.5PF LAG)</td><td>Load box provided current of TA at PF=0.5 lagging is used.</td></tr></table> <p>TEST TYPE PARAMETERS</p> <p>A. ACCURACY TEST</p> <p>Perform this test to determine a meter’s accuracy under one or more load conditions.</p> <p>PARAMETERS</p> <table><tr><td>PULSES</td><td>Sets the number of pulses that the test will be run. Different numbers of pulses can be set for different loading conditions.</td></tr><tr><td>WEIGHT</td><td>When the overall accuracy for the selected test is computed, a weighted average can be performed. To get the weighted average, the WEIGHT is multiplied by the %ERROR and the product summed over all tests. The result is divided by the total weight of tests performed.</td></tr><tr><td>ITR</td><td>Iteration of the selected test.</td></tr><tr><td>TOLERANCE</td><td>Tolerance needed for pass/fail criteria.</td></tr><tr><td>WARM-UP TIME</td><td>Period of time for meter to stabilize prior to test execution.</td></tr></table>	F1	NEW ADV SETUP		F2			F3			F4	PULSE ALIGN	Perform to check pulse alignment. See section 3.3.2.1c Pulse Alignment Check for more information.	F5	START	Start the manual meter test.	FORM	Form number of the meter.	Kh	Meter test constant.	SERVICE	Services/wiring configurations available for selected meter form.	TA	Test amp of the meter.	PULSES PER REV	If a meter is configured to generate multiple pulses per Kh, then this is the number of pulses per Kh.	SERIAL NUMBER	Serial number of the meter. This is optional.	1-CL (CUSTOMER LOAD)	Uses customer load where the site analyzer is measuring the voltage signal and the current signals from both the potential and the current transformers.	2-FL (TA)	Load box provided current of TA at PF=1.0 is used.	3-LL (10%TA)	Load box provided current of 10% TA at PF=1.0 is used.	4-PF (TA @ 0.5PF LAG)	Load box provided current of TA at PF=0.5 lagging is used.	PULSES	Sets the number of pulses that the test will be run. Different numbers of pulses can be set for different loading conditions.	WEIGHT	When the overall accuracy for the selected test is computed, a weighted average can be performed. To get the weighted average, the WEIGHT is multiplied by the %ERROR and the product summed over all tests. The result is divided by the total weight of tests performed.	ITR	Iteration of the selected test.	TOLERANCE	Tolerance needed for pass/fail criteria.	WARM-UP TIME	Period of time for meter to stabilize prior to test execution.
F1	NEW ADV SETUP																																													
F2																																														
F3																																														
F4	PULSE ALIGN	Perform to check pulse alignment. See section 3.3.2.1c Pulse Alignment Check for more information.																																												
F5	START	Start the manual meter test.																																												
FORM	Form number of the meter.																																													
Kh	Meter test constant.																																													
SERVICE	Services/wiring configurations available for selected meter form.																																													
TA	Test amp of the meter.																																													
PULSES PER REV	If a meter is configured to generate multiple pulses per Kh, then this is the number of pulses per Kh.																																													
SERIAL NUMBER	Serial number of the meter. This is optional.																																													
1-CL (CUSTOMER LOAD)	Uses customer load where the site analyzer is measuring the voltage signal and the current signals from both the potential and the current transformers.																																													
2-FL (TA)	Load box provided current of TA at PF=1.0 is used.																																													
3-LL (10%TA)	Load box provided current of 10% TA at PF=1.0 is used.																																													
4-PF (TA @ 0.5PF LAG)	Load box provided current of TA at PF=0.5 lagging is used.																																													
PULSES	Sets the number of pulses that the test will be run. Different numbers of pulses can be set for different loading conditions.																																													
WEIGHT	When the overall accuracy for the selected test is computed, a weighted average can be performed. To get the weighted average, the WEIGHT is multiplied by the %ERROR and the product summed over all tests. The result is divided by the total weight of tests performed.																																													
ITR	Iteration of the selected test.																																													
TOLERANCE	Tolerance needed for pass/fail criteria.																																													
WARM-UP TIME	Period of time for meter to stabilize prior to test execution.																																													
<div><div><div>ACCURACY TEST</div></div><div><div><div><div>MANUAL METER TEST</div><div><div>UTILITY METER TO TEST</div><div>FORM: 9S Kh: 1.80 SERVICE: 4-Wire, Wye</div><div>TA: 2.5 PULSES PER REV: 1 SERIAL NO: M999-123</div><div><div>SELECT TEST LOADS</div><div><div>1-CL (CUSTOMER LOAD)</div><div>2-FL (TA)</div><div>3-LL (10%TA)</div><div>4-PF (TA @ 0.5PF LAG)</div><div>5-ADV (ADVANCE SETUP)</div></div></div><div><div>TEST TYPE</div><div><div>ACCURACY</div><div>TIMED RUN</div><div>TIMED REG</div><div>DEMAND</div><div>ENERGY</div></div><div><div>PULSES</div><div>WEIGHT</div><div>ITR</div></div><div><div>CL: 3 1 2</div><div>FL: 0 0 0</div><div>LL: 0 0 0</div><div>PF: 0 0 0</div><div>ADV: 0 0 0</div></div><div><div>TOLERANCE: 0.50%</div><div>PASS OR FAIL CRITERIA</div><div>WARM-UP TIME: 00:00:00</div><div>NOTE: ONLY RUNS BEFORE THE FIRST TEST.</div></div></div><div><div>NEW ADV SETUP</div><div>PULSE ALIGN</div><div>START</div></div></div></div></div></div></div>																																														

SCREEN	DESCRIPTION										
	<p>B. TIMED RUN TEST</p> <p>A timed run test is identical to an accuracy test except the minimum time for the test is set. The actual measurement still starts and ends based on the meter pulses.</p> <p>PARAMETERS</p> <table> <tr> <td>TEST DURATION</td><td>Set the test duration.</td></tr> <tr> <td>ITERATIONS</td><td>Number of times the test will be repeated</td></tr> <tr> <td>TOLERANCE</td><td>Tolerance used for pass/fail criteria.</td></tr> <tr> <td>WARM-UP TIME</td><td>Time for meter to stabilize prior to test execution.</td></tr> </table>	TEST DURATION	Set the test duration.	ITERATIONS	Number of times the test will be repeated	TOLERANCE	Tolerance used for pass/fail criteria.	WARM-UP TIME	Time for meter to stabilize prior to test execution.		
TEST DURATION	Set the test duration.										
ITERATIONS	Number of times the test will be repeated										
TOLERANCE	Tolerance used for pass/fail criteria.										
WARM-UP TIME	Time for meter to stabilize prior to test execution.										
	<p>C. TIMED REGISTER TEST</p> <p>This test prompts the user for the meter's primary register value and runs a test for a predefined duration. Then, it prompts the user again for the meter's primary register value. The system computes the meter's registration using the difference of the two values.</p> <p>Note: Use caution that the accuracy of the test is not limited by the resolution of the meter readout.</p> <p>PARAMETERS</p> <table> <tr> <td>TEST DURATION</td><td>Set the test duration.</td></tr> <tr> <td>ITERATIONS</td><td>Number of times the test will be repeated</td></tr> <tr> <td>TOLERANCE</td><td>Tolerance used for pass/fail criteria.</td></tr> <tr> <td>WARM-UP TIME</td><td>Time for meter to stabilize prior to test execution.</td></tr> </table>	TEST DURATION	Set the test duration.	ITERATIONS	Number of times the test will be repeated	TOLERANCE	Tolerance used for pass/fail criteria.	WARM-UP TIME	Time for meter to stabilize prior to test execution.		
TEST DURATION	Set the test duration.										
ITERATIONS	Number of times the test will be repeated										
TOLERANCE	Tolerance used for pass/fail criteria.										
WARM-UP TIME	Time for meter to stabilize prior to test execution.										
	<p>D. DEMAND TEST</p> <p>The demand interval must be set to the same interval as the meter under test. For this test to work correctly you must be able to reset the demand register of the meter. The meter's demand must continually show the interval demand.</p> <p>PARAMETERS</p> <table> <tr> <td>INTERVAL</td><td>Set the interval of meter.</td></tr> <tr> <td>SUB-INTERVAL</td><td>Set the sub-interval for the demand test.</td></tr> <tr> <td>ITERATIONS</td><td>Number of times the test will be repeated</td></tr> <tr> <td>TOLERANCE</td><td>Tolerance needed for pass/fail criteria.</td></tr> <tr> <td>WARM-UP TIME</td><td>Time for meter to stabilize prior to test execution.</td></tr> </table>	INTERVAL	Set the interval of meter.	SUB-INTERVAL	Set the sub-interval for the demand test.	ITERATIONS	Number of times the test will be repeated	TOLERANCE	Tolerance needed for pass/fail criteria.	WARM-UP TIME	Time for meter to stabilize prior to test execution.
INTERVAL	Set the interval of meter.										
SUB-INTERVAL	Set the sub-interval for the demand test.										
ITERATIONS	Number of times the test will be repeated										
TOLERANCE	Tolerance needed for pass/fail criteria.										
WARM-UP TIME	Time for meter to stabilize prior to test execution.										

SCREEN	DESCRIPTION																																									
<div>ENERGY TEST</div>	<p>E. ENERGY TEST</p> <p>The energy delivered test is similar to the timed register test. The difference is that instead of specifying the time for the test to run we specify the amount of energy to be delivered.</p> <p>PARAMETERS</p> <table> <tr> <td>ENERGY DELIVERED</td><td>Set the amount of energy to be delivered to the meter</td></tr> <tr> <td>WARM-UP TIME</td><td>Time for meter to stabilize prior to test execution</td></tr> </table>	ENERGY DELIVERED	Set the amount of energy to be delivered to the meter	WARM-UP TIME	Time for meter to stabilize prior to test execution																																					
ENERGY DELIVERED	Set the amount of energy to be delivered to the meter																																									
WARM-UP TIME	Time for meter to stabilize prior to test execution																																									
<div>METER TEST RESULT</div>	<p>METER TEST RESULT</p> <p>Test results can only be saved when a site was selected.</p> <p>KEYPAD & FUNCTION KEYS</p> <table> <tr> <td>F1</td><td></td><td></td></tr> <tr> <td>F2</td><td></td><td></td></tr> <tr> <td>F3</td><td></td><td></td></tr> <tr> <td>F4</td><td></td><td></td></tr> <tr> <td>F5</td><td>CANCEL</td><td>Cancel the test process and return to: <ul style="list-style-type: none"> - MANUAL METER TEST SETUP (when performing MANUAL TEST) - TEST SEQUENCE SETUP (when performing SEQUENCE TEST) </td></tr> <tr> <td></td><td>CONTINUE</td><td>Proceed to SEQUENCE SUMMARY screen.</td></tr> </table>	F1			F2			F3			F4			F5	CANCEL	Cancel the test process and return to: <ul style="list-style-type: none"> - MANUAL METER TEST SETUP (when performing MANUAL TEST) - TEST SEQUENCE SETUP (when performing SEQUENCE TEST) 		CONTINUE	Proceed to SEQUENCE SUMMARY screen.																							
F1																																										
F2																																										
F3																																										
F4																																										
F5	CANCEL	Cancel the test process and return to: <ul style="list-style-type: none"> - MANUAL METER TEST SETUP (when performing MANUAL TEST) - TEST SEQUENCE SETUP (when performing SEQUENCE TEST) 																																								
	CONTINUE	Proceed to SEQUENCE SUMMARY screen.																																								
<div>TEST FINISHED</div> <div>SEQUENCE SUMMARY</div>	<p>TEST PARAMETERS</p> <table> <tr> <td>TAG</td><td>Alias or brief description of the test</td></tr> <tr> <td>ITERATION</td><td>Number of test iteration</td></tr> <tr> <td>TEST STATUS</td><td>Indicates test type</td></tr> <tr> <td rowspan="3">PULSES</td><td>Preset</td><td>Pre-defined number of pulses</td></tr> <tr> <td>Actual</td><td>Counted pulses during test</td></tr> <tr> <td>Remaining</td><td>Remaining pulses during and after test</td></tr> </table> <p>TEST RESULTS</p> <table> <tr> <td>TEST</td><td>Test number</td></tr> <tr> <td>ITR</td><td>Test iteration</td></tr> <tr> <td>TAG</td><td>Alias or brief description of the test</td></tr> <tr> <td>WHrs</td><td>Actual WHrs measured</td></tr> <tr> <td>%ERROR</td><td>Measured percent error</td></tr> <tr> <td>P/F</td><td>Pass or Fail</td></tr> <tr> <td>REG</td><td>Measured registration</td></tr> <tr> <td>W</td><td>Weight applied in the average error calculation</td></tr> <tr> <td>Va</td><td>Phase A voltage</td></tr> <tr> <td>Ia</td><td>Phase A current</td></tr> <tr> <td>Vb</td><td>Phase B voltage</td></tr> <tr> <td>Ib</td><td>Phase B current</td></tr> <tr> <td>Vc</td><td>Phase C voltage</td></tr> <tr> <td>Ic</td><td>Phase C current</td></tr> </table>	TAG	Alias or brief description of the test	ITERATION	Number of test iteration	TEST STATUS	Indicates test type	PULSES	Preset	Pre-defined number of pulses	Actual	Counted pulses during test	Remaining	Remaining pulses during and after test	TEST	Test number	ITR	Test iteration	TAG	Alias or brief description of the test	WHrs	Actual WHrs measured	%ERROR	Measured percent error	P/F	Pass or Fail	REG	Measured registration	W	Weight applied in the average error calculation	Va	Phase A voltage	Ia	Phase A current	Vb	Phase B voltage	Ib	Phase B current	Vc	Phase C voltage	Ic	Phase C current
TAG	Alias or brief description of the test																																									
ITERATION	Number of test iteration																																									
TEST STATUS	Indicates test type																																									
PULSES	Preset	Pre-defined number of pulses																																								
	Actual	Counted pulses during test																																								
	Remaining	Remaining pulses during and after test																																								
TEST	Test number																																									
ITR	Test iteration																																									
TAG	Alias or brief description of the test																																									
WHrs	Actual WHrs measured																																									
%ERROR	Measured percent error																																									
P/F	Pass or Fail																																									
REG	Measured registration																																									
W	Weight applied in the average error calculation																																									
Va	Phase A voltage																																									
Ia	Phase A current																																									
Vb	Phase B voltage																																									
Ib	Phase B current																																									
Vc	Phase C voltage																																									
Ic	Phase C current																																									

SCREEN	DESCRIPTION																																																																																																																												
<div><div>SEQUENCE SUMMARY</div><div><div><div>SEQUENCE SUMMARY</div><div><div>Meter Test Results</div><table><thead><tr><th>INDEX</th><th>TYPE</th><th>PASS/FAIL</th><th>%ERR</th><th>PARAM</th></tr></thead><tbody><tr><td>1-1</td><td>CL ACC</td><td>PASS</td><td>0.077%</td><td>5 pulses</td></tr></tbody></table><div>REDO</div><div>REVIEW</div><div>DONE</div></div></div></div></div> <div><div><div>METER TEST RESULTS</div><div><div>TEST PARAMETERS</div><div>TAG: CL ACC ITERATION: 1 TEST STATUS: Test in Progress</div><div>Pulses: PRESET: 5 ACTUAL: 0 REMAINING: 5 WHrs: 0.565</div><div><div>MEASUREMENTS</div><div><div>METER VIEW</div><table><thead><tr><th></th><th>PHASE A - N</th><th>PHASE B - N</th><th>PHASE C - N</th></tr></thead><tbody><tr><td>V:</td><td>119.987</td><td>119.907</td><td>119.985</td></tr><tr><td>θ(V):</td><td>0.000</td><td>234.794</td><td>117.591</td></tr><tr><th></th><th>PHASE A</th><th>PHASE B</th><th>PHASE C</th></tr><tr><td>I:</td><td>1.001</td><td>1.000</td><td>0.999</td></tr><tr><td>θ(I):</td><td>1.839</td><td>236.238</td><td>129.014</td></tr></tbody></table><div>270° 180° 90°</div></div></div><div>CANCEL</div></div></div></div> <div><div><div>METER TEST RESULTS</div><div><div>TEST PARAMETERS</div><div>TAG: CL ACC ITERATION: 1 TEST STATUS: Test Finished</div><div>5 pulses ACCUMULATED: 8.993 Wh %ERR: 0.077% PASS</div><div><div>MEASUREMENTS</div><div><div>METER VIEW</div><table><thead><tr><th></th><th>PHASE A - N</th><th>PHASE B - N</th><th>PHASE C - N</th></tr></thead><tbody><tr><td>V:</td><td>119.972</td><td>119.972</td><td>119.941</td></tr><tr><td>θ(V):</td><td>0.000</td><td>240.035</td><td>120.010</td></tr><tr><th></th><th>PHASE A</th><th>PHASE B</th><th>PHASE C</th></tr><tr><td>I:</td><td>1.001</td><td>1.000</td><td>1.000</td></tr><tr><td>θ(I):</td><td>359.484</td><td>239.380</td><td>119.483</td></tr></tbody></table><div>270° 180° 90°</div></div></div><div>CONTINUE</div></div></div></div>	INDEX	TYPE	PASS/FAIL	%ERR	PARAM	1-1	CL ACC	PASS	0.077%	5 pulses		PHASE A - N	PHASE B - N	PHASE C - N	V:	119.987	119.907	119.985	θ(V):	0.000	234.794	117.591		PHASE A	PHASE B	PHASE C	I:	1.001	1.000	0.999	θ(I):	1.839	236.238	129.014		PHASE A - N	PHASE B - N	PHASE C - N	V:	119.972	119.972	119.941	θ(V):	0.000	240.035	120.010		PHASE A	PHASE B	PHASE C	I:	1.001	1.000	1.000	θ(I):	359.484	239.380	119.483	<div><div>F. ENERGY TEST</div><div>The energy delivered test is similar to the timed register test. The difference is that instead of specifying the time for the test to run we specify the amount of energy to be delivered.</div><div><div>PARAMETERS</div><table><tr><td>ENERGY DELIVERED</td><td>Set the amount of energy to be delivered to the meter</td></tr><tr><td>WARM-UP TIME</td><td>Time for meter to stabilize prior to test execution</td></tr></table></div><div><div>METER TEST RESULT</div><div>Test results can only be saved when a site was selected.</div><div><div>KEYPAD & FUNCTION KEYS</div><table><tr><td>F1</td><td></td><td></td></tr><tr><td>F2</td><td></td><td></td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td></td><td></td></tr><tr><td></td><td>DONE</td><td>Return to the MANUAL METER TEST screen.</td></tr><tr><td>F5</td><td>CANCEL</td><td>Cancel the test process and return to:<ul style="list-style-type: none">MANUAL METER TEST SETUP (when performing MANUAL TEST)TEST SEQUENCE SETUP (when performing SEQUENCE TEST)</td></tr></table></div><div><div>TEST PARAMETERS</div><table><tr><td>TAG</td><td colspan="2">Alias or brief description of the test</td></tr><tr><td>ITERATION</td><td colspan="2">Number of test iteration</td></tr><tr><td>TEST STATUS</td><td colspan="2">Indicates test type</td></tr><tr><td rowspan="3">PULSES</td><td>Preset</td><td>Pre-defined number of pulses</td></tr><tr><td>Actual</td><td>Counted pulses during test</td></tr><tr><td>Remaining</td><td>Remaining pulses during and after test</td></tr></table></div><div><div>TEST RESULTS</div><table><tr><td>TEST</td><td>Test number</td></tr><tr><td>ITR</td><td>Test iteration</td></tr><tr><td>TAG</td><td>Alias or brief description of the test</td></tr><tr><td>WHrs</td><td>Actual WHrs measured</td></tr><tr><td>%ERROR</td><td>Measured percent error</td></tr><tr><td>P/F</td><td>Pass or Fail</td></tr><tr><td>REG</td><td>Measured registration</td></tr><tr><td>W</td><td>Weight applied in the average error calculation</td></tr><tr><td>Va</td><td>Phase A voltage</td></tr><tr><td>Ia</td><td>Phase A current</td></tr><tr><td>Vb</td><td>Phase B voltage</td></tr><tr><td>Ib</td><td>Phase B current</td></tr><tr><td>Vc</td><td>Phase C voltage</td></tr><tr><td>Ic</td><td>Phase C current</td></tr></table></div></div></div>	ENERGY DELIVERED	Set the amount of energy to be delivered to the meter	WARM-UP TIME	Time for meter to stabilize prior to test execution	F1			F2			F3			F4				DONE	Return to the MANUAL METER TEST screen.	F5	CANCEL	Cancel the test process and return to: <ul style="list-style-type: none">MANUAL METER TEST SETUP (when performing MANUAL TEST)TEST SEQUENCE SETUP (when performing SEQUENCE TEST)	TAG	Alias or brief description of the test		ITERATION	Number of test iteration		TEST STATUS	Indicates test type		PULSES	Preset	Pre-defined number of pulses	Actual	Counted pulses during test	Remaining	Remaining pulses during and after test	TEST	Test number	ITR	Test iteration	TAG	Alias or brief description of the test	WHrs	Actual WHrs measured	%ERROR	Measured percent error	P/F	Pass or Fail	REG	Measured registration	W	Weight applied in the average error calculation	Va	Phase A voltage	Ia	Phase A current	Vb	Phase B voltage	Ib	Phase B current	Vc	Phase C voltage	Ic	Phase C current
INDEX	TYPE	PASS/FAIL	%ERR	PARAM																																																																																																																									
1-1	CL ACC	PASS	0.077%	5 pulses																																																																																																																									
	PHASE A - N	PHASE B - N	PHASE C - N																																																																																																																										
V:	119.987	119.907	119.985																																																																																																																										
θ(V):	0.000	234.794	117.591																																																																																																																										
	PHASE A	PHASE B	PHASE C																																																																																																																										
I:	1.001	1.000	0.999																																																																																																																										
θ(I):	1.839	236.238	129.014																																																																																																																										
	PHASE A - N	PHASE B - N	PHASE C - N																																																																																																																										
V:	119.972	119.972	119.941																																																																																																																										
θ(V):	0.000	240.035	120.010																																																																																																																										
	PHASE A	PHASE B	PHASE C																																																																																																																										
I:	1.001	1.000	1.000																																																																																																																										
θ(I):	359.484	239.380	119.483																																																																																																																										
ENERGY DELIVERED	Set the amount of energy to be delivered to the meter																																																																																																																												
WARM-UP TIME	Time for meter to stabilize prior to test execution																																																																																																																												
F1																																																																																																																													
F2																																																																																																																													
F3																																																																																																																													
F4																																																																																																																													
	DONE	Return to the MANUAL METER TEST screen.																																																																																																																											
F5	CANCEL	Cancel the test process and return to: <ul style="list-style-type: none">MANUAL METER TEST SETUP (when performing MANUAL TEST)TEST SEQUENCE SETUP (when performing SEQUENCE TEST)																																																																																																																											
TAG	Alias or brief description of the test																																																																																																																												
ITERATION	Number of test iteration																																																																																																																												
TEST STATUS	Indicates test type																																																																																																																												
PULSES	Preset	Pre-defined number of pulses																																																																																																																											
	Actual	Counted pulses during test																																																																																																																											
	Remaining	Remaining pulses during and after test																																																																																																																											
TEST	Test number																																																																																																																												
ITR	Test iteration																																																																																																																												
TAG	Alias or brief description of the test																																																																																																																												
WHrs	Actual WHrs measured																																																																																																																												
%ERROR	Measured percent error																																																																																																																												
P/F	Pass or Fail																																																																																																																												
REG	Measured registration																																																																																																																												
W	Weight applied in the average error calculation																																																																																																																												
Va	Phase A voltage																																																																																																																												
Ia	Phase A current																																																																																																																												
Vb	Phase B voltage																																																																																																																												
Ib	Phase B current																																																																																																																												
Vc	Phase C voltage																																																																																																																												
Ic	Phase C current																																																																																																																												

3.3.3.1b CT Testing

SCREEN


DESCRIPTION

CT TEST MODES
The CAT6330 provides a wide range of methods for testing CTs.

BURDEN ONLY TEST	The change in the secondary current is measured as the burden placed on the CT is increased. This test does not require a current probe, such as a Rogowski coil, connected to the primary of the transformer.
RATIO ONLY TEST	Both primary and secondary currents are measured with NO additional burden added to the circuits. This test does require a current probe, such as a Rogowski coil, connected to the primary of the transformer.
RATIO TEST WITH ADDED BURDEN	The Ratio with Burden test is the most accurate test of the performance of a CT. Both primary and secondary of the CT are simultaneously measured. From these measurements we can calculate many CT parameters such as accuracy class, RCF, ratio error and phase error. This test does require a current probe, such as a Rogowski coil, connected to the primary of the transformer.
ADMITTANCE	An admittance test injects a 1575 Hz signal into the secondary of a CT and measures the response to determine the admittance of the CT. The value you measure depends somewhat on the primary wiring and circuit characteristics. However, these effects do not generally change over time. Therefore, the real value of an admittance test is that one can do the hard job of making a Ratio with Burden test once, and then make an admittance test on the known good site. Later one can just measure admittance to see if anything on the site has changed.

KEYPAD & FUNCTION KEYS:

F1	DEMAG	Demagnetize all CTs.
F2		
F3		
F4		
F5	START	Start test.

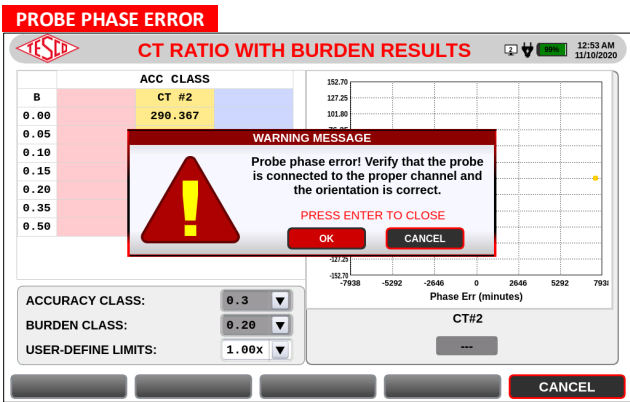
Press  to return to the previous screen.

CT PARAMETERS

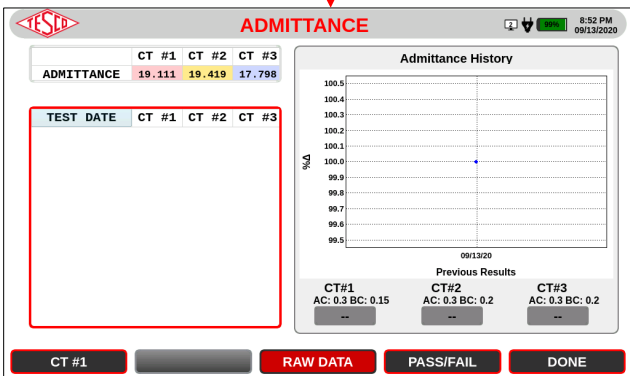
MANUFACTURER	Manufacturer name
MODEL	Model number/code
SERIAL NO.	Serial number
NAMEPLATE RATIO	Nameplate ratio of the CT
BURDEN CLASS	Burden class of the CT
RATING FACTOR	Rating factor of the CT
ACCURACY CLASS	Accuracy class of the CT
MAX TEST BURDEN	Max burden allowed for the CT

SCREEN	DESCRIPTION																																								
<div><div><div>BURDEN ONLY</div><div></div></div><div><div><div><div>CT BURDEN RESULTS</div><div><div><div><div><div>B</div><div>ΔI1 (%)</div><div>ΔI2 (%)</div><div>ΔI3 (%)</div></div><div><div>0.00</div><div>0.000</div><div>0.000</div><div>0.000</div></div><div><div>0.05</div><div>0.123</div><div>0.280</div><div>0.223</div></div><div><div>0.10</div><div>0.238</div><div>0.421</div><div>0.254</div></div><div><div>0.15</div><div>0.403</div><div>0.524</div><div>0.429</div></div><div><div>0.20</div><div>0.463</div><div>0.764</div><div>0.632</div></div><div><div>0.35</div><div>0.842</div><div>1.243</div><div>0.933</div></div><div><div>0.50</div><div>1.533</div><div>2.052</div><div>1.326</div></div></div></div><div><div>ACCURACY CLASS:</div><div>0.3</div></div><div><div>BURDEN CLASS:</div><div>0.20</div></div><div><div>USER-DEFINE LIMITS:</div><div>1.00x</div></div><div><div>CT #1</div><div>OVERWRITE</div><div></div><div>CONTINUE</div></div></div><div><div><div><div>0</div><div>0.05</div><div>0.1</div><div>0.15</div><div>0.2</div><div>0.35</div><div>0.5</div></div><div>Burdens</div></div><div><div><div>0</div><div>-0.4</div><div>-0.8</div><div>-1.2</div><div>-1.6</div><div>-2.0</div></div><div>ΔI (%)</div></div><div><div><div>0</div><div>0.05</div><div>0.1</div><div>0.15</div><div>0.2</div><div>0.35</div><div>0.5</div></div><div>Burdens</div></div><div><div><div>0</div><div>-0.4</div><div>-0.8</div><div>-1.2</div><div>-1.6</div><div>-2.0</div></div><div>ΔI (%)</div></div></div><div><div>CT#1</div><div>CT#2</div><div>CT#3</div></div><div><div>PASS</div><div>FAIL</div><div>FAIL</div></div></div></div></div></div>	<h3>CT TEST RESULTS</h3> <p>CT test results are presented for Ratio, Burden, Ratio with Burden, and Admittance tests. Soft keys provide many different ways of looking at the test data.</p> <p>The test on each CT will PASS if:</p> <ul style="list-style-type: none">Measured current falls within the specified accuracy region (in a Burden Test) or inside the parallelogram (in a Ratio Test) even at low current <p>The test on each CT will FAIL if:</p> <ul style="list-style-type: none">Current is below minimum or above maximum current of CTMeasured current is beyond the specified accuracy region (in a Burden Test) or outside the parallelogram (in a Ratio Test) <h3>CT TEST RESULTS ICONS</h3> <table><tr><td></td><td>Secondary current is above RF * 5A. Accuracy is not specified above this point. Pass/Fail will be determined using the ≥ 100% accuracy.</td></tr><tr><td></td><td>Secondary current is below the minimum current for the accuracy class. Accuracy is not specified in this region. Pass/Fail will be determined using the lowest accuracy for the class.</td></tr><tr><td></td><td>Measured current is in the high accuracy portion of the specification.</td></tr><tr><td></td><td>Measured current is in the low accuracy portion of the specification. Typically, twice the uncertainty of the high accuracy region.</td></tr></table> <h3>CT BURDEN ONLY</h3> <p>Test the CT with a certain burden. The accuracy region covers the area limited by the accuracy class and burden class.</p> <h3>KEYPAD & FUNCTION KEYS:</h3> <table><tr><td rowspan="4">F1</td><td>ALL</td><td rowspan="4">Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.</td></tr><tr><td>CT #1</td></tr><tr><td>CT #2</td></tr><tr><td>CT #3</td></tr><tr><td>F2</td><td>OVERWRITE</td><td>Change the values of Accuracy Class and Burden Class.</td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td></td><td></td></tr><tr><td>F5</td><td>CONTINUE</td><td>Return to CT Test Setup.</td></tr></table> <h3>DATA</h3> <table><tr><td>B</td><td>Burden resistance</td></tr><tr><td>ΔI1</td><td>Measured current in CT#1</td></tr><tr><td>ΔI2</td><td>Measured current in CT#2</td></tr><tr><td>ΔI3</td><td>Measured current in CT#3</td></tr><tr><td>ACCURACY CLASS</td><td>Accuracy class of CT</td></tr><tr><td>BURDEN CLASS</td><td>Burden class of CT</td></tr><tr><td>USER-DEFINE LIMITS</td><td>Extended range of accuracy class</td></tr></table>		Secondary current is above RF * 5A. Accuracy is not specified above this point. Pass/Fail will be determined using the ≥ 100% accuracy.		Secondary current is below the minimum current for the accuracy class. Accuracy is not specified in this region. Pass/Fail will be determined using the lowest accuracy for the class.		Measured current is in the high accuracy portion of the specification.		Measured current is in the low accuracy portion of the specification. Typically, twice the uncertainty of the high accuracy region.	F1	ALL	Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.	CT #1	CT #2	CT #3	F2	OVERWRITE	Change the values of Accuracy Class and Burden Class.	F3			F4			F5	CONTINUE	Return to CT Test Setup.	B	Burden resistance	ΔI1	Measured current in CT#1	ΔI2	Measured current in CT#2	ΔI3	Measured current in CT#3	ACCURACY CLASS	Accuracy class of CT	BURDEN CLASS	Burden class of CT	USER-DEFINE LIMITS	Extended range of accuracy class
	Secondary current is above RF * 5A. Accuracy is not specified above this point. Pass/Fail will be determined using the ≥ 100% accuracy.																																								
	Secondary current is below the minimum current for the accuracy class. Accuracy is not specified in this region. Pass/Fail will be determined using the lowest accuracy for the class.																																								
	Measured current is in the high accuracy portion of the specification.																																								
	Measured current is in the low accuracy portion of the specification. Typically, twice the uncertainty of the high accuracy region.																																								
F1	ALL	Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.																																							
	CT #1																																								
	CT #2																																								
	CT #3																																								
F2	OVERWRITE	Change the values of Accuracy Class and Burden Class.																																							
F3																																									
F4																																									
F5	CONTINUE	Return to CT Test Setup.																																							
B	Burden resistance																																								
ΔI1	Measured current in CT#1																																								
ΔI2	Measured current in CT#2																																								
ΔI3	Measured current in CT#3																																								
ACCURACY CLASS	Accuracy class of CT																																								
BURDEN CLASS	Burden class of CT																																								
USER-DEFINE LIMITS	Extended range of accuracy class																																								

SCREEN	DESCRIPTION																																																																										
<div><div>RATIO ONLY</div><div><p>CT RATIO RESULTS</p><table><thead><tr><th></th><th>CT #1</th><th>CT #2</th><th>CT #3</th></tr></thead><tbody><tr><td>ACCURACY</td><td>0.276</td><td>1.240</td><td>0.471</td></tr><tr><td>RATIO</td><td>100.145</td><td>100.618</td><td>100.438</td></tr><tr><td>RATIO ERR</td><td>0.145</td><td>0.618</td><td>0.438</td></tr><tr><td>RCF</td><td>1.001</td><td>1.006</td><td>1.004</td></tr><tr><td>PHASE ERR</td><td>-3.407</td><td>-16.168</td><td>-0.847</td></tr><tr><td>SEC CURRENT</td><td>1.000</td><td>1.001</td><td>1.000</td></tr><tr><td>PRI CURRENT</td><td>20.031</td><td>20.143</td><td>20.094</td></tr></tbody></table><p>ACCURACY CLASS: 0.3 USER-DEFINE LIMITS: 1.00x</p><p>CT#1 AC: 0.3 BC: 0.2 PASSED CT#2 AC: 0.3 BC: 0.2 FAILED CT#3 AC: 0.3 BC: 0.2 PASSED</p><p>Buttons: CT #1, OVERRIDE, SAVE</p></div></div>		CT #1	CT #2	CT #3	ACCURACY	0.276	1.240	0.471	RATIO	100.145	100.618	100.438	RATIO ERR	0.145	0.618	0.438	RCF	1.001	1.006	1.004	PHASE ERR	-3.407	-16.168	-0.847	SEC CURRENT	1.000	1.001	1.000	PRI CURRENT	20.031	20.143	20.094	<p>CT RATIO ONLY</p> <p>The ratio only test measures the complete set of CT parameters and displays them in numeric and graphical form. The data is also displayed on the IEEE accuracy parallelogram. CTs which meet the requirements of their accuracy class will be represented by points inside the parallelogram. The size of the parallelogram is adjusted appropriately based on the current through the CT.</p> <p>DATA</p> <table><thead><tr><th>Parameter</th><th>Value</th></tr></thead><tbody><tr><td>ACCURACY</td><td>Measured accuracy</td></tr><tr><td>RATIO</td><td>TBD</td></tr><tr><td>RATIO ERR</td><td>TBD</td></tr><tr><td>RCF</td><td>TBD</td></tr><tr><td>PHASE ERR</td><td>TBD</td></tr><tr><td>SEC CURRENT</td><td>TBD</td></tr><tr><td>PRI CURRENT</td><td>TBD</td></tr><tr><td>ACCURACY CLASS</td><td>Accuracy class of CT</td></tr><tr><td>USER-DEFINE LIMITS</td><td>Extended range of accuracy class</td></tr></tbody></table> <p>KEYPAD & FUNCTION KEYS:</p> <table><thead><tr><th>Key</th><th>Function</th><th>Description</th></tr></thead><tbody><tr><td rowspan="4">F1</td><td>ALL</td><td rowspan="4">Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.</td></tr><tr><td>CT #1</td></tr><tr><td>CT #2</td></tr><tr><td>CT #3</td></tr><tr><td>F2</td><td>OVERVERRIDE</td><td>Allows the user to override the values of Accuracy Class and Burden Class provided in the setup screen.</td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td></td><td></td></tr><tr><td rowspan="2">F5</td><td>DONE</td><td rowspan="2">Return to CT Test Setup.</td></tr><tr><td>SAVE</td></tr></tbody></table>	Parameter	Value	ACCURACY	Measured accuracy	RATIO	TBD	RATIO ERR	TBD	RCF	TBD	PHASE ERR	TBD	SEC CURRENT	TBD	PRI CURRENT	TBD	ACCURACY CLASS	Accuracy class of CT	USER-DEFINE LIMITS	Extended range of accuracy class	Key	Function	Description	F1	ALL	Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.	CT #1	CT #2	CT #3	F2	OVERVERRIDE	Allows the user to override the values of Accuracy Class and Burden Class provided in the setup screen.	F3			F4			F5	DONE	Return to CT Test Setup.	SAVE
	CT #1	CT #2	CT #3																																																																								
ACCURACY	0.276	1.240	0.471																																																																								
RATIO	100.145	100.618	100.438																																																																								
RATIO ERR	0.145	0.618	0.438																																																																								
RCF	1.001	1.006	1.004																																																																								
PHASE ERR	-3.407	-16.168	-0.847																																																																								
SEC CURRENT	1.000	1.001	1.000																																																																								
PRI CURRENT	20.031	20.143	20.094																																																																								
Parameter	Value																																																																										
ACCURACY	Measured accuracy																																																																										
RATIO	TBD																																																																										
RATIO ERR	TBD																																																																										
RCF	TBD																																																																										
PHASE ERR	TBD																																																																										
SEC CURRENT	TBD																																																																										
PRI CURRENT	TBD																																																																										
ACCURACY CLASS	Accuracy class of CT																																																																										
USER-DEFINE LIMITS	Extended range of accuracy class																																																																										
Key	Function	Description																																																																									
F1	ALL	Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.																																																																									
	CT #1																																																																										
	CT #2																																																																										
	CT #3																																																																										
F2	OVERVERRIDE	Allows the user to override the values of Accuracy Class and Burden Class provided in the setup screen.																																																																									
F3																																																																											
F4																																																																											
F5	DONE	Return to CT Test Setup.																																																																									
	SAVE																																																																										
<div><div>BURDEN+RATIO</div><div><p>CT RATIO WITH BURDEN RESULTS</p><table><thead><tr><th>B</th><th>CT #1</th><th>CT #2</th><th>CT #3</th></tr></thead><tbody><tr><td>0.00</td><td>0.092</td><td>1.333</td><td>0.436</td></tr><tr><td>0.05</td><td>0.143</td><td>1.195</td><td>0.512</td></tr><tr><td>0.10</td><td>0.201</td><td>1.199</td><td>0.498</td></tr><tr><td>0.15</td><td>0.276</td><td>1.071</td><td>0.615</td></tr><tr><td>0.20</td><td>0.321</td><td>0.979</td><td>0.700</td></tr><tr><td>0.35</td><td>0.424</td><td>1.194</td><td>0.858</td></tr></tbody></table><p>ACCURACY CLASS: 0.3 BURDEN CLASS: 0.15 USER-DEFINE LIMITS: 1.00x</p><p>CT#1 AC: 0.3 BC: 0.15 PASSED CT#2 AC: 0.3 BC: 0.2 FAILED CT#3 AC: 0.3 BC: 0.2 FAILED</p><p>Buttons: CT #1, OVERRIDE, RATIO ERR, CURVES, DONE</p></div></div>	B	CT #1	CT #2	CT #3	0.00	0.092	1.333	0.436	0.05	0.143	1.195	0.512	0.10	0.201	1.199	0.498	0.15	0.276	1.071	0.615	0.20	0.321	0.979	0.700	0.35	0.424	1.194	0.858	<p>CT RATIO WITH BURDEN</p> <p>This test is performed just like the burden only test except the ratio of primary to secondary current times 5 is shown.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><thead><tr><th>Key</th><th>Function</th><th>Description</th></tr></thead><tbody><tr><td rowspan="4">F1</td><td>ALL</td><td rowspan="4">Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.</td></tr><tr><td>CT #1</td></tr><tr><td>CT #2</td></tr><tr><td>CT #3</td></tr><tr><td>F2</td><td>OVERVERRIDE</td><td>Allow overriding the values of the accuracy class and burden class selected in the setup.</td></tr><tr><td rowspan="2">F3</td><td>RATIO ERR</td><td>Shift between different test results:<ul style="list-style-type: none">Accuracy ClassRCF (Ratio Correction Factor)Ratio ErrorPhase Error (')RatioΔI (%)Secondary CurrentPrimary Current</td></tr></tbody></table>	Key	Function	Description	F1	ALL	Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.	CT #1	CT #2	CT #3	F2	OVERVERRIDE	Allow overriding the values of the accuracy class and burden class selected in the setup.	F3	RATIO ERR	Shift between different test results: <ul style="list-style-type: none">Accuracy ClassRCF (Ratio Correction Factor)Ratio ErrorPhase Error (')RatioΔI (%)Secondary CurrentPrimary Current																															
B	CT #1	CT #2	CT #3																																																																								
0.00	0.092	1.333	0.436																																																																								
0.05	0.143	1.195	0.512																																																																								
0.10	0.201	1.199	0.498																																																																								
0.15	0.276	1.071	0.615																																																																								
0.20	0.321	0.979	0.700																																																																								
0.35	0.424	1.194	0.858																																																																								
Key	Function	Description																																																																									
F1	ALL	Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.																																																																									
	CT #1																																																																										
	CT #2																																																																										
	CT #3																																																																										
F2	OVERVERRIDE	Allow overriding the values of the accuracy class and burden class selected in the setup.																																																																									
F3	RATIO ERR	Shift between different test results: <ul style="list-style-type: none">Accuracy ClassRCF (Ratio Correction Factor)Ratio ErrorPhase Error (')RatioΔI (%)Secondary CurrentPrimary Current																																																																									



ADMITTANCE



F4 CURVES

Label changes depending on what view you are in. In CURVES view, it shows PARALLELOGRAM and changes to PARALLELOGRAM plot when pressed.

F5 DONE

DONE or SAVE will be available depending on whether a site has been selected.

SAVE

DATA

B	Burden resistance
ΔI (%)	Measured current
ACCURACY CLASS	Accuracy class of CT
BURDEN CLASS	Burden class of CT
USER-DEFINE LIMITS	Extended range of accuracy class

ADMITTANCE TEST

An admittance test injects a signal into the secondary of a CT and measures the response to determine the admittance of the CT. The user can manually PASS/FAIL a CT based on the user's standard.

KEYPAD & FUNCTION KEYS

F1 ALL

Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.

CT #1

CT #2

CT #3

F2

F3 RAW DATA

Show numerical/actual data.

F4 PASS/FAIL

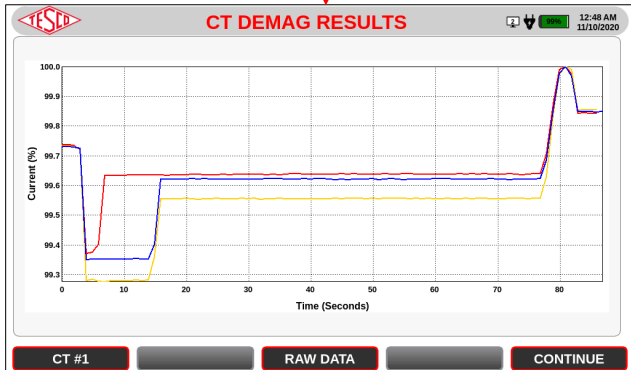
Manually PASS/ FAIL a CT or all CTs.

F5 DONE

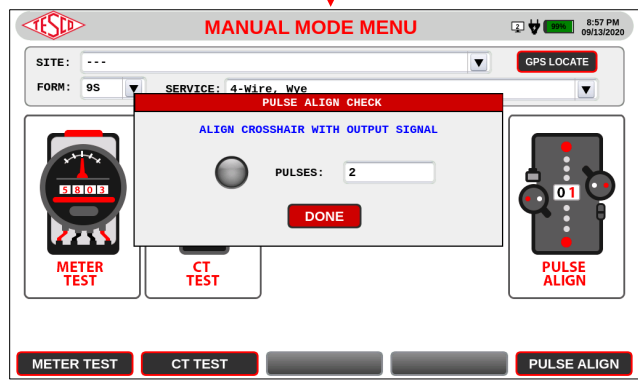
Return to CT Test Setup.

TEST PARAMETERS

TEST DATE	Date and time when test was performed
CT #N	Show test result of CT #N, where N is the CT number

SCREEN	DESCRIPTION																					
<div><div>DEMAG</div><div></div></div>	<p>DEMAGNETIZATION TEST</p> <p>Demagnetize all CTs. Current transformer demagnetization is done by gradually increasing the secondary resistance from low to high then from high to low at a consistent rate.</p> <p>KEYPAD & FUNCTION KEYS</p> <table><tr><td></td><td>ALL</td><td rowspan="4">Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.</td></tr><tr><td>F1</td><td>CT #1</td></tr><tr><td></td><td>CT #2</td></tr><tr><td></td><td>CT #3</td></tr><tr><td>F2</td><td></td><td></td></tr><tr><td>F3</td><td>RAW DATA</td><td>Show numerical/actual data.</td></tr><tr><td>F4</td><td></td><td></td></tr><tr><td>F5</td><td>CONTINUE</td><td>Returns to CT TEST SETUP screen.</td></tr></table>		ALL	Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.	F1	CT #1		CT #2		CT #3	F2			F3	RAW DATA	Show numerical/actual data.	F4			F5	CONTINUE	Returns to CT TEST SETUP screen.
	ALL	Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.																				
F1	CT #1																					
	CT #2																					
	CT #3																					
F2																						
F3	RAW DATA	Show numerical/actual data.																				
F4																						
F5	CONTINUE	Returns to CT TEST SETUP screen.																				

3.3.3.1c Pulse Alignment Check

SCREEN	DESCRIPTION				
<p style="text-align: center;">PULSE ALIGN</p> 	<p>This will apply voltage and current to the meter so that the optical probe can be aligned with the meter's pulse output. Before performing a pulse alignment check, make sure that the optical pickup (1037-SA) is attached to the meter.</p> <p>FUNCTION KEYS</p> <table border="1"> <tr> <td>DONE</td><td>Close the pop-up screen</td></tr> </table> <p>DATA</p> <table border="1"> <tr> <td>PULSES</td><td>Pulse count</td></tr> </table>	DONE	Close the pop-up screen	PULSES	Pulse count
DONE	Close the pop-up screen				
PULSES	Pulse count				

3.3.3.2 Sequence Testing

SCREEN

DESCRIPTION

SEQUENCE TESTING

TEST SEQUENCE SETUP

SEQUENCE NAME: Connor Sequence

SERVICE: UniversalTOLERANCE: 0.50%[Pass/Fail Requirement For Meter Tests](#)

INDEX	TAG	TEST DESCRIPTION	
1	RwB	CT RATIO WITH BURDEN TEST	VIEW...
2	CL ACC	CUSTOMER LOAD METER ACCURACY TEST	VIEW...
3	FL TRUN	FULL LOAD METER TIMED RUN TEST	VIEW...
4	FL ACC	FULL LOAD METER ACCURACY TEST	VIEW...

RUN

Sequence testing is performed when there is more than one type of test to execute. In this test, a sequence must be selected and To know how to perform a Sequence Test, proceed to section 4.3 Sequence Test.

KEYPAD & FUNCTION KEYS

F1		
F2		
F3		
F4		
F5	RUN	Start sequence testing.

DATA

All data is taken from the SITE data records. A SITE must be selected before a TEST SEQUENCE can be run. All boxes on this form are read-only except SEQUENCE and the ENA fields.

SEQUENCE NAME	Sequences available for selected meter form and service.
TOLERANCE	Tolerance for the pass or fail criteria.
TA	Test amps (RMS of a full load test).
SERVICE	Services/wiring configurations available for selected meter form.
ENA	Toggle to select or deselect a test.
TAG	Alias or brief description of the test.
TEST DESCRIPTION	Type of test available for the sequence.

TEST SEQUENCE SETUP

SEQUENCE NAME: Connor Sequence

SERVICE: UniversalTOLERANCE: 0.50%[Pass/Fail Requirement For Meter Tests](#)

INDEX	TAG	TEST DESCRIPTION	
1	RwB	CT RATIO WITH BURDEN TEST	VIEW...
2	CL ACC	CUSTOMER LOAD METER ACCURACY TEST	VIEW...
3	FL TRUN	FULL LOAD METER TIMED RUN TEST	VIEW...
4	FL ACC	FULL LOAD METER ACCURACY TEST	VIEW...

RUN

Test Setup

Choose test category!

CT Test

"All CT related tests"

BACK Press F1 (Back), F4 (Next) or F5 (Cancel) NEXT CANCEL

SITE SCAN

Voltages and currents are scanned and evaluated to see if they match the site configuration specified.

KEYPAD & FUNCTION KEYS

F1	PRIMARY	Switch showing between primary and secondary current readings.
F2		
F3		
F4		
F5	CONTINUE	Proceed to the next test in the sequence.

SITE SCAN

	PHASE A	PHASE B	PHASE C
V:	119.9988	120.0210	120.0274
θ(V):	0.000	119.994	240.004
I:	0.9508	0.9504	0.9499
θ(I):	0.000	120.014	240.011
Δθ:	0.000	0.019	0.007
PI:	18.9952	19.1305	19.0775
θ(PI):	359.978	119.716	239.996
Δθ(P):	0.022	0.298	0.015
PF:	1.000	1.000	1.000

PHASE ROTATION: ABC

PRIMARYCONTINUE

For more information on the tests, refer to section 3.3.2.1a Meter Test and 3.3.2.1b CT Test.


3.3.3.3 Database

SCREEN	DESCRIPTION																																																					
<div><div>DATABASE</div><div><div><div><div>1:13 AM 11/10/2020</div></div><div><div>SEARCH SITE:</div><div></div></div><div><table><tr><th>ID</th><th>Name</th><th>Service</th><th>Address</th><th>City</th></tr><tr><td>123</td><td>BILLS PIZZA</td><td>4-Wire, Wye</td><td>1432 BRISTOL PIKE</td><td>BRISTOL</td></tr></table></div><div><div>SELECTED SITE:</div><div>BILLS PIZZA</div></div><div><div>NOTE:</div><div>1. USE [TAB] TO SWITCH BETWEEN SEARCH AND THE TABLE 2. USE [UP] OR [DOWN] ARROWS THEN [ENTER] TO SELECT A SITE</div></div><div><div>NEW SITE</div><div>EDIT SITE</div><div>TEST RESULTS</div><div>SEQUENCES</div></div></div><div><div>NEW SITE</div><div>EDIT SITE</div><div>TEST RESULTS</div><div>TEST SEQUENCES</div></div></div></div>	ID	Name	Service	Address	City	123	BILLS PIZZA	4-Wire, Wye	1432 BRISTOL PIKE	BRISTOL	<p>This contains information on sites registered in the Site Analyzer. The user can create a new site and edit an existing record. Aside from the site, the user can also create and edit Meter, CT, and Customer information per site.</p> <p>The database also shows test results from Meter and CT tests. Do note that these test results were able to be saved because a site was selected prior to performing the test. To edit a site or view the test results, a site must be selected first.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><tr><td>F1</td><td>NEW SITE</td><td>Create new site information. This also includes creating and editing information on meter, CT, and customer.</td></tr><tr><td>F2</td><td>EDIT SITE</td><td>Edit information of a site, meter, CT, and customer. This will be enabled once a site is selected.</td></tr><tr><td>F3</td><td>TEST RESULTS</td><td>View test results on meter, CT, and PT tests. This will be enabled once a site is selected.</td></tr><tr><td>F4</td><td>DATA LIBRARY</td><td>View/Create/Edit information on meter, CT, and PT.</td></tr><tr><td>F5</td><td>TEST SEQUENCES</td><td>View/Create/Edit test sequences.</td></tr></table> <p>Press L to return to the previous screen.</p> <p>DATA</p> <table><tr><td>SEARCH SITE</td><td>Enter characters to search for a site</td></tr><tr><td>SITE ID</td><td>ID of site</td></tr><tr><td>SITE NAME</td><td>Name of site</td></tr><tr><td>DESCRIPTION</td><td>Description about site</td></tr><tr><td>CUSTOMER</td><td>Choose customer</td></tr><tr><td>ADDRESS 1</td><td>Location of site</td></tr><tr><td>ADDRESS 2</td><td>Location of site</td></tr><tr><td>CITY</td><td>City where site is located</td></tr><tr><td>STATE/PROVINCE</td><td>State/Province where site is located</td></tr><tr><td>ZIPCODE</td><td>Zip code of the local address</td></tr><tr><td>COUNTRY</td><td>Country where site is located</td></tr><tr><td>GPS</td><td>Automatically fill in using GPS Locate</td></tr><tr><td>NOTES</td><td>Additional information about the site</td></tr><tr><td>SELECTED SITE</td><td>Displays name of the selected site to edit</td></tr></table>	F1	NEW SITE	Create new site information. This also includes creating and editing information on meter, CT, and customer.	F2	EDIT SITE	Edit information of a site, meter, CT, and customer. This will be enabled once a site is selected.	F3	TEST RESULTS	View test results on meter, CT, and PT tests. This will be enabled once a site is selected.	F4	DATA LIBRARY	View/Create/Edit information on meter, CT, and PT.	F5	TEST SEQUENCES	View/Create/Edit test sequences.	SEARCH SITE	Enter characters to search for a site	SITE ID	ID of site	SITE NAME	Name of site	DESCRIPTION	Description about site	CUSTOMER	Choose customer	ADDRESS 1	Location of site	ADDRESS 2	Location of site	CITY	City where site is located	STATE/PROVINCE	State/Province where site is located	ZIPCODE	Zip code of the local address	COUNTRY	Country where site is located	GPS	Automatically fill in using GPS Locate	NOTES	Additional information about the site	SELECTED SITE	Displays name of the selected site to edit
ID	Name	Service	Address	City																																																		
123	BILLS PIZZA	4-Wire, Wye	1432 BRISTOL PIKE	BRISTOL																																																		
F1	NEW SITE	Create new site information. This also includes creating and editing information on meter, CT, and customer.																																																				
F2	EDIT SITE	Edit information of a site, meter, CT, and customer. This will be enabled once a site is selected.																																																				
F3	TEST RESULTS	View test results on meter, CT, and PT tests. This will be enabled once a site is selected.																																																				
F4	DATA LIBRARY	View/Create/Edit information on meter, CT, and PT.																																																				
F5	TEST SEQUENCES	View/Create/Edit test sequences.																																																				
SEARCH SITE	Enter characters to search for a site																																																					
SITE ID	ID of site																																																					
SITE NAME	Name of site																																																					
DESCRIPTION	Description about site																																																					
CUSTOMER	Choose customer																																																					
ADDRESS 1	Location of site																																																					
ADDRESS 2	Location of site																																																					
CITY	City where site is located																																																					
STATE/PROVINCE	State/Province where site is located																																																					
ZIPCODE	Zip code of the local address																																																					
COUNTRY	Country where site is located																																																					
GPS	Automatically fill in using GPS Locate																																																					
NOTES	Additional information about the site																																																					
SELECTED SITE	Displays name of the selected site to edit																																																					


3.3.3.3a New/Edit Site

SCREEN	DESCRIPTION																																																																
<div><div>NEW SITE</div><div><div>NEW SITE INFO</div><div><div>NEW SITE INFO</div><div><div>NEW SITE</div><div><div>SITE ID: <input type="text"/></div><div>SITE NAME: <input type="text"/></div></div><div>DESCRIPTION: <input type="text"/></div><div>CUSTOMER: <div>---</div><div></div></div><div>ADDRESS 1: <input type="text"/></div><div>ADDRESS 2: <input type="text"/></div><div><div>CITY: <input type="text"/></div><div>STATE/ PROVINCE: <div>AL</div><div></div></div><div>ZIPCODE: 19007</div></div><div>COUNTRY: <div>UnitedStates</div><div></div></div><div>GPS: <input type="text"/></div></div><div>NOTES: <input type="text"/></div><div><div>FORM: 3S</div><div>SERVICE: 2-Wire, 1 Ph</div></div></div><div><div>METER INFO</div><div>CUSTOMERS</div><div>GPS LOCATE</div><div>SAVE</div></div><div><div>NEW/EDIT METER</div><div>NEW/EDIT CUSTOMER</div></div></div></div> <div><div><div>SITE INFORMATION</div><div><div>SITE ID 123</div><div>SITE NAME BILLS PIZZA</div></div><div>DESCRIPTION <input type="text"/></div><div>CUSTOMER MODERN PIZZA LLC</div></div><div><div>METER INFORMATION</div><div><div>FORM 9S</div><div>KH 1.80</div><div>SERVICE 4-Wire, Wye</div></div><div><div>TA 2.5</div><div>PULSES PER REV 1</div><div>SERIAL NO. 123</div></div></div><div><div>CT INFORMATION</div><table><tr><th>CT</th><th>RATIO</th><th>AC</th><th>BC</th><th>RF</th><th>MODEL</th><th>SERIAL NO.</th></tr><tr><td>2</td><td>100:5</td><td>0.3</td><td>0.2</td><td>4</td><td></td><td>456</td></tr><tr><td>3</td><td>100:5</td><td>0.3</td><td>0.2</td><td>4</td><td></td><td>789</td></tr></table></div><div><div>EDIT</div><div>SAVE</div></div></div> <div><div>EDIT SITE</div><div><div>EDIT SITE INFO</div><div><div>EDIT SITE INFO</div><div><div>NEW SITE</div><div><div>SITE ID: 123</div><div>SITE NAME: BILLS PIZZA</div></div><div>DESCRIPTION: <input type="text"/></div><div>CUSTOMER: MODERN PIZZA LLC</div><div>ADDRESS 1: 1432 BRISTOL PIKE</div><div>ADDRESS 2: <input type="text"/></div><div><div>CITY: BRISTOL</div><div>STATE/ PROVINCE: PA</div><div>ZIPCODE: 19007</div></div><div>COUNTRY: United States</div><div>GPS: 40.10429 , -74.85239</div><div>NOTES: METER IN REAR, CTS ON ROOF</div><div><div>FORM: 9S</div><div>SERVICE: 4-Wire, Wye</div></div></div><div><div>METER INFO</div><div>CUSTOMERS</div><div>GPS LOCATE</div><div>SAVE</div></div></div></div></div>	CT	RATIO	AC	BC	RF	MODEL	SERIAL NO.	2	100:5	0.3	0.2	4		456	3	100:5	0.3	0.2	4		789	<div>NEW/EDIT SITE</div> <div>Create new site information. Fill out the information and save it in the database. If the site info is for editing, the fields will be filled with pre-saved information of that site and the user can make changes.</div> <div>KEYPAD & FUNCTION KEYS:</div> <table><tr><td>F1</td><td>METER INFO</td><td>Open the METER INFO screen to create or edit meter information.</td></tr><tr><td>F2</td><td></td><td></td></tr><tr><td>F3</td><td>CUSTOMERS</td><td>Open the CUSTOMERS screen to view, edit, and create customer information.</td></tr><tr><td>F4</td><td>GPS LOCATE</td><td>Obtain GPS coordinates of the Site Analyzer.</td></tr><tr><td>F5</td><td>SAVE</td><td>Save site information. Proceeds to Site Information Database afterwards.</td></tr></table> <div>Press to return to the previous screen.</div> <div>DATA</div> <table><tr><th>SITE ID</th><th>ID of site</th></tr><tr><td>SITE NAME</td><td>Name of site</td></tr><tr><td>DESCRIPTION</td><td>Description about site</td></tr><tr><td>CUSTOMER</td><td>Choose customer</td></tr><tr><td>ADDRESS 1</td><td>Location of site</td></tr><tr><td>ADDRESS 2</td><td>Location of site</td></tr><tr><td>CITY</td><td>City where site is located</td></tr><tr><td>STATE/PROVINCE</td><td>State/Province where site is located</td></tr><tr><td>ZIPCODE</td><td>Zip code of the local address</td></tr><tr><td>COUNTRY</td><td>Country where site is located</td></tr><tr><td>GPS</td><td>Automatically fill in using GPS Locate</td></tr><tr><td>NOTES</td><td>Additional information about the site</td></tr><tr><td>FORM</td><td>Meter form associated with the site.</td></tr><tr><td>SERVICE</td><td>Service and CT/PT configuration.</td></tr></table> <div>Note: Highlighted data indicate required parameters.</div>	F1	METER INFO	Open the METER INFO screen to create or edit meter information.	F2			F3	CUSTOMERS	Open the CUSTOMERS screen to view, edit, and create customer information.	F4	GPS LOCATE	Obtain GPS coordinates of the Site Analyzer.	F5	SAVE	Save site information. Proceeds to Site Information Database afterwards.	SITE ID	ID of site	SITE NAME	Name of site	DESCRIPTION	Description about site	CUSTOMER	Choose customer	ADDRESS 1	Location of site	ADDRESS 2	Location of site	CITY	City where site is located	STATE/PROVINCE	State/Province where site is located	ZIPCODE	Zip code of the local address	COUNTRY	Country where site is located	GPS	Automatically fill in using GPS Locate	NOTES	Additional information about the site	FORM	Meter form associated with the site.	SERVICE	Service and CT/PT configuration.
CT	RATIO	AC	BC	RF	MODEL	SERIAL NO.																																																											
2	100:5	0.3	0.2	4		456																																																											
3	100:5	0.3	0.2	4		789																																																											
F1	METER INFO	Open the METER INFO screen to create or edit meter information.																																																															
F2																																																																	
F3	CUSTOMERS	Open the CUSTOMERS screen to view, edit, and create customer information.																																																															
F4	GPS LOCATE	Obtain GPS coordinates of the Site Analyzer.																																																															
F5	SAVE	Save site information. Proceeds to Site Information Database afterwards.																																																															
SITE ID	ID of site																																																																
SITE NAME	Name of site																																																																
DESCRIPTION	Description about site																																																																
CUSTOMER	Choose customer																																																																
ADDRESS 1	Location of site																																																																
ADDRESS 2	Location of site																																																																
CITY	City where site is located																																																																
STATE/PROVINCE	State/Province where site is located																																																																
ZIPCODE	Zip code of the local address																																																																
COUNTRY	Country where site is located																																																																
GPS	Automatically fill in using GPS Locate																																																																
NOTES	Additional information about the site																																																																
FORM	Meter form associated with the site.																																																																
SERVICE	Service and CT/PT configuration.																																																																


3.3.3.3b New/Edit Meter

SCREEN	DESCRIPTION																																																	
<div><div>NEW/EDIT METER</div><div><div>NEW METER INFO</div><div><div>METER INFO</div><div><div>METER INFORMATION</div><div><div>SERIAL#:</div><div>FORM: 9S</div><div>BASE: S</div><div>MANUFACT:</div><div>CLASS: 20</div><div>TA: 2.50</div><div>MODEL:</div><div>Kh: 1.80</div><div>Kt: 1.80</div><div>CATALOG #:</div><div>PULSES PER REV: 1</div><div>UTILITY S/N:</div><div>ACCURACY CLASS: 0.20%</div><div>COMM S/N:</div><div><div><div><div>KYZ CAPABLE</div><div>BIDIRECTION</div><div>DEMAND CAPABLE</div></div></div></div></div><div><div>CT INFO</div><div>CUSTOMER</div></div><div><div>NEW/EDIT CT</div><div>NEW/EDIT CUSTOMER</div></div></div></div></div><div><div>EDIT METER INFO</div><div><div>METER INFO</div><div><div>METER INFORMATION</div><div><div>SERIAL#:</div><div>FORM: 9S</div><div>BASE: S</div><div>MANUFACT:</div><div>CLASS: 20</div><div>TA: 2.50</div><div>MODEL:</div><div>Kh: 1.80</div><div>Kt: 1.80</div><div>CATALOG #:</div><div>PULSES PER REV: 1</div><div>UTILITY S/N:</div><div>ACCURACY CLASS: 0.10%</div><div>COMM S/N:</div><div><div><div><div>KYZ CAPABLE</div><div>BIDIRECTION</div><div>DEMAND CAPABLE</div></div></div></div></div><div><div>CT INFO</div><div></div><div></div><div></div><div></div></div></div></div></div></div>	<p>Create new meter information. Fill out the information and save it in the database. If the existing meter info is for editing, the fields will be filled with pre-saved information of that meter and the user can make changes.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><tr><td>F1</td><td>CT INFO</td><td>Open the NEW CT screen to create new CT information</td></tr><tr><td>F2</td><td></td><td></td></tr><tr><td>F3</td><td>CUSTOMER</td><td>Open the CUSTOMERS screen to view, edit, and create customer information</td></tr><tr><td>F4</td><td></td><td></td></tr><tr><td>F5</td><td></td><td></td></tr></table> <p>Press  to return to the previous screen.</p> <p>DATA</p> <table><tr><td>SERIAL #</td><td>Serial number of the meter</td></tr><tr><td>MANUFACT</td><td>Manufacturer's name</td></tr><tr><td>MODEL</td><td>Model number of the meter</td></tr><tr><td>CATALOG #</td><td>Catalog # of the meter</td></tr><tr><td>UTILITY S/N</td><td>Serial number provided by Utility (if applicable)</td></tr><tr><td>COMM S/N</td><td>Serial number of communication device (if applicable)</td></tr><tr><td>FORM</td><td>Form number of the meter (auto-populates the default Kh in the Kh field)</td></tr><tr><td>BASE</td><td>Meter base (S, K, A, etc...)</td></tr><tr><td>CLASS</td><td>Meter class (determines maximum current and auto-populates the default test amps in TA field)</td></tr><tr><td>TA</td><td>Test Amps (RMS of a full load test)</td></tr><tr><td>Kh</td><td>Meter Constant (Watt hours per revolution of disk)</td></tr><tr><td>Kt</td><td>Meter Test Constant (Watt hours per pulse) Kt = Kh / Pulses per revolution</td></tr><tr><td>PULSES PER REV</td><td>Number of pulses in every revolution of the disk. Integer >= 1</td></tr><tr><td>ACCURACY CLASS</td><td>Accuracy class of the meter</td></tr><tr><td>BIDIRECTIONAL</td><td>Select if meter has bidirectionality functionality</td></tr><tr><td>KYZ</td><td>Select if meter has KYZ functionality</td></tr><tr><td>DEMAND CAPABLE</td><td>Select if meter is capable of demand testing</td></tr></table> <p>Note: Highlighted data indicate required parameters. Fields with default values are required and must be set correctly if the default is not correct.</p>	F1	CT INFO	Open the NEW CT screen to create new CT information	F2			F3	CUSTOMER	Open the CUSTOMERS screen to view, edit, and create customer information	F4			F5			SERIAL #	Serial number of the meter	MANUFACT	Manufacturer's name	MODEL	Model number of the meter	CATALOG #	Catalog # of the meter	UTILITY S/N	Serial number provided by Utility (if applicable)	COMM S/N	Serial number of communication device (if applicable)	FORM	Form number of the meter (auto-populates the default Kh in the Kh field)	BASE	Meter base (S, K, A, etc...)	CLASS	Meter class (determines maximum current and auto-populates the default test amps in TA field)	TA	Test Amps (RMS of a full load test)	Kh	Meter Constant (Watt hours per revolution of disk)	Kt	Meter Test Constant (Watt hours per pulse) Kt = Kh / Pulses per revolution	PULSES PER REV	Number of pulses in every revolution of the disk. Integer >= 1	ACCURACY CLASS	Accuracy class of the meter	BIDIRECTIONAL	Select if meter has bidirectionality functionality	KYZ	Select if meter has KYZ functionality	DEMAND CAPABLE	Select if meter is capable of demand testing
F1	CT INFO	Open the NEW CT screen to create new CT information																																																
F2																																																		
F3	CUSTOMER	Open the CUSTOMERS screen to view, edit, and create customer information																																																
F4																																																		
F5																																																		
SERIAL #	Serial number of the meter																																																	
MANUFACT	Manufacturer's name																																																	
MODEL	Model number of the meter																																																	
CATALOG #	Catalog # of the meter																																																	
UTILITY S/N	Serial number provided by Utility (if applicable)																																																	
COMM S/N	Serial number of communication device (if applicable)																																																	
FORM	Form number of the meter (auto-populates the default Kh in the Kh field)																																																	
BASE	Meter base (S, K, A, etc...)																																																	
CLASS	Meter class (determines maximum current and auto-populates the default test amps in TA field)																																																	
TA	Test Amps (RMS of a full load test)																																																	
Kh	Meter Constant (Watt hours per revolution of disk)																																																	
Kt	Meter Test Constant (Watt hours per pulse) Kt = Kh / Pulses per revolution																																																	
PULSES PER REV	Number of pulses in every revolution of the disk. Integer >= 1																																																	
ACCURACY CLASS	Accuracy class of the meter																																																	
BIDIRECTIONAL	Select if meter has bidirectionality functionality																																																	
KYZ	Select if meter has KYZ functionality																																																	
DEMAND CAPABLE	Select if meter is capable of demand testing																																																	

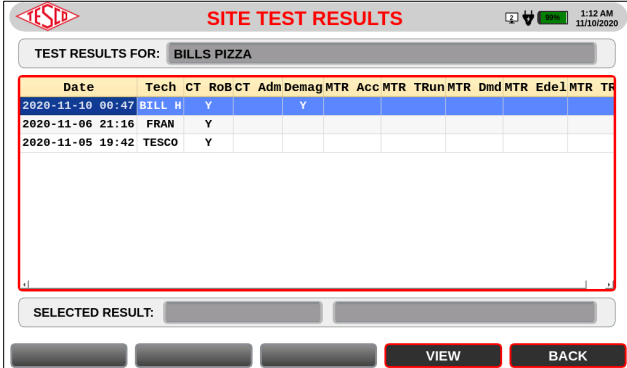


















3.3.3.3c New/Edit CT

SCREEN	DESCRIPTION																													
<div><div>NEW/EDIT CT</div><div><div>NEW CT</div><div><div>CT INFORMATION</div><div>CT#1</div><div>SERIAL NO:<div></div></div><div>MANUFACTURER:<div>R Magnetics, Inc.</div></div><div>MODEL:<div>605 Series</div></div><div>NAMEPLATE RATIO:<div>0</div> : <div>0</div></div><div>BURDEN RATING:<div>0.35</div></div><div>RATING FACTOR:<div>0.00</div></div><div>ACCURACY CLASS:<div>0.3E</div></div><div>MAX TEST BURDEN:<div>4.00</div></div></div><div><div>SITE INFO</div><div>COPY 1 TO ALL</div><div>CT LIBRARY</div></div></div><div><div>NEW/EDIT SITE</div></div></div> <div><div>EDIT CT</div><div><div>NEW CT</div><div><div>CT INFORMATION</div><div>CT#1</div><div>SERIAL NO:<div>C-213-SEGTEGE-04</div></div><div>MANUFACTURER:<div>R Magnetics, Inc.</div></div><div>MODEL:<div>605 Series</div></div><div>NAMEPLATE RATIO:<div>100</div> : <div>5</div></div><div>BURDEN RATING:<div>0.20</div></div><div>RATING FACTOR:<div>1.00</div></div><div>ACCURACY CLASS:<div>0.3</div></div><div>MAX TEST BURDEN:<div>0.50</div></div></div><div><div>CT#2</div><div>SERIAL NO:<div>C-213-SEGTEGE-05</div></div><div>MANUFACTURER:<div>R Magnetics, Inc.</div></div><div>MODEL:<div>605 Series</div></div><div>NAMEPLATE RATIO:<div>100</div> : <div>5</div></div><div>BURDEN RATING:<div>0.20</div></div><div>RATING FACTOR:<div>1.00</div></div><div>ACCURACY CLASS:<div>0.3</div></div><div>MAX TEST BURDEN:<div>0.50</div></div></div><div><div>CT#3</div><div>SERIAL NO:<div>C-213-SEGTEGE-06</div></div><div>MANUFACTURER:<div>R Magnetics, Inc.</div></div><div>MODEL:<div>605 Series</div></div><div>NAMEPLATE RATIO:<div>100</div> : <div>5</div></div><div>BURDEN RATING:<div>0.20</div></div><div>RATING FACTOR:<div>1.00</div></div><div>ACCURACY CLASS:<div>0.3</div></div><div>MAX TEST BURDEN:<div>0.50</div></div></div></div><div><div>SITE INFO</div><div>COPY 1 TO ALL</div><div>CT LIBRARY</div></div></div>	<div><div>NEW CT</div><div>Create new CT information. Fill out the information and save it in the database. A maximum of three (3) CTs can be added at a time. If the existing CT info is for editing, the fields will be filled with pre-saved information of that CT and the user can make changes and save them.</div><div><div>KEYPAD & FUNCTION KEYS:</div><table><tr><td>F1</td><td>SITE INFO</td><td>Open the SITE INFO screen to create or edit a site</td></tr><tr><td>F2</td><td>COPY 1 TO ALL</td><td>Copy information (except serial number) from CT #1 to other CTs.</td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td>CT LIBRARY</td><td></td></tr><tr><td>F5</td><td></td><td></td></tr></table><div>Press  to return to the previous screen.</div></div><div><div>DATA</div><table><tr><td>SERIAL NO</td><td>Serial number of the meter</td></tr><tr><td>MANUFACTURER</td><td>Manufacturer's name</td></tr><tr><td>MODEL</td><td>Model number of the meter</td></tr><tr><td>NAMEPLATE RATIO</td><td>Ratio of primary to secondary current</td></tr><tr><td>RATING FACTOR</td><td>Rating factor of the CT</td></tr><tr><td>ACCURACY CLASS</td><td>Accuracy class of the CT</td></tr><tr><td>MAX TEST BURDEN</td><td>Maximum amount of burden</td></tr></table><div>Note: Highlighted data indicate required parameters. Fields with default values are required and must be set correctly if the default is not correct.</div></div></div>	F1	SITE INFO	Open the SITE INFO screen to create or edit a site	F2	COPY 1 TO ALL	Copy information (except serial number) from CT #1 to other CTs.	F3			F4	CT LIBRARY		F5			SERIAL NO	Serial number of the meter	MANUFACTURER	Manufacturer's name	MODEL	Model number of the meter	NAMEPLATE RATIO	Ratio of primary to secondary current	RATING FACTOR	Rating factor of the CT	ACCURACY CLASS	Accuracy class of the CT	MAX TEST BURDEN	Maximum amount of burden
F1	SITE INFO	Open the SITE INFO screen to create or edit a site																												
F2	COPY 1 TO ALL	Copy information (except serial number) from CT #1 to other CTs.																												
F3																														
F4	CT LIBRARY																													
F5																														
SERIAL NO	Serial number of the meter																													
MANUFACTURER	Manufacturer's name																													
MODEL	Model number of the meter																													
NAMEPLATE RATIO	Ratio of primary to secondary current																													
RATING FACTOR	Rating factor of the CT																													
ACCURACY CLASS	Accuracy class of the CT																													
MAX TEST BURDEN	Maximum amount of burden																													

3.3.3.3d New/Edit Customer

SCREEN	DESCRIPTION																											
<div><div>NEW/EDIT CUSTOMER</div><div><div>NEW CUSTOMER</div><div><div>CUSTOMER INFO</div><div>CUSTOMER INFORMATION</div><div><div>EXISTING CUSTOMER</div><div>NEW CUSTOMER</div></div><div>CUSTOMER NAME</div><div>CUSTOMER ID</div><div>CUSTOMER ACCOUNT NUMBER</div><div><div>SITE INFO</div><div>EDIT</div><div>SAVE</div></div></div></div><div><div>EXISTING CUSTOMER</div><div><div>CUSTOMER INFO</div><div>CUSTOMER INFORMATION</div><div><div>EXISTING CUSTOMER</div><div>NEW CUSTOMER</div></div><div>CUSTOMER NAME JASPER GONZALEZ</div><div>CUSTOMER ID 21</div><div>CUSTOMER ACCOUNT NUMBER 200035618</div><div><div>SITE INFO</div><div>EDIT</div><div>DELETE</div></div></div></div></div>	<p>Create new customer information. Fill out the information and save it in the database. If the customer info is for editing, the fields will be filled with pre-saved information of that customer and the user can make changes.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><tr><td>F1</td><td>SITE INFO</td><td>Open the NEW SITE INFO screen</td></tr><tr><td>F2</td><td></td><td></td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td>EDIT</td><td>Edit existing customer information. Information that are grayed out will be enabled for editing.</td></tr><tr><td></td><td>CANCEL</td><td>Cancel editing the existing customer's information</td></tr><tr><td></td><td>DELETE</td><td>Delete existing customer's information. This will be enabled once a customer is selected.</td></tr><tr><td>F5</td><td>SAVE</td><td>Save changes made to existing or new customer's information</td></tr></table> <p>Press  to return to the previous screen.</p> <p>DATA</p> <table><tr><td>CUSTOMER NAME</td><td>Name of customer</td></tr><tr><td>CUSTOMER ID</td><td>ID of customer</td></tr><tr><td>CUSTOMER ACCOUNT NUMBER</td><td>Account number of customer</td></tr></table>	F1	SITE INFO	Open the NEW SITE INFO screen	F2			F3			F4	EDIT	Edit existing customer information. Information that are grayed out will be enabled for editing.		CANCEL	Cancel editing the existing customer's information		DELETE	Delete existing customer's information. This will be enabled once a customer is selected.	F5	SAVE	Save changes made to existing or new customer's information	CUSTOMER NAME	Name of customer	CUSTOMER ID	ID of customer	CUSTOMER ACCOUNT NUMBER	Account number of customer
F1	SITE INFO	Open the NEW SITE INFO screen																										
F2																												
F3																												
F4	EDIT	Edit existing customer information. Information that are grayed out will be enabled for editing.																										
	CANCEL	Cancel editing the existing customer's information																										
	DELETE	Delete existing customer's information. This will be enabled once a customer is selected.																										
F5	SAVE	Save changes made to existing or new customer's information																										
CUSTOMER NAME	Name of customer																											
CUSTOMER ID	ID of customer																											
CUSTOMER ACCOUNT NUMBER	Account number of customer																											

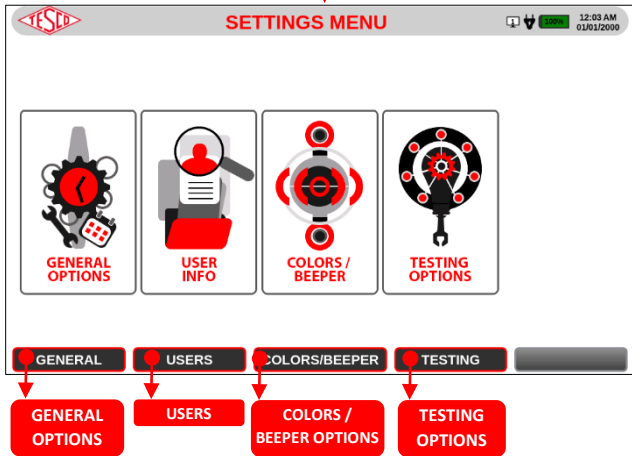

3.3.3.3e Test Results

SCREEN	DESCRIPTION															
<div><div>SITE TEST RESULTS</div><div></div></div>	<p>All of the test results for the selected site are displayed and organized by test session. The display indicates which test types are included in a particular test session. Use the  and  buttons to scroll to a site and press ENTER to select. Press VIEW to view the data in summary form.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><tr><td>F1</td><td></td><td></td></tr><tr><td>F2</td><td></td><td></td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td></td><td>View details of selected test result.</td></tr><tr><td>F5</td><td></td><td>Return to the SITE INFORMATION DATABASE screen.</td></tr></table> <p>Press  to return to the previous screen.</p>	F1			F2			F3			F4		View details of selected test result.	F5		Return to the SITE INFORMATION DATABASE screen.
F1																
F2																
F3																
F4		View details of selected test result.														
F5		Return to the SITE INFORMATION DATABASE screen.														

3.3.3.3f Test Sequences

SCREEN	DESCRIPTION															
<div><div>TEST SEQUENCES</div><div><p>SEQUENCE LIBRARY</p><p>SEARCH TEXT SERVICE: ---</p><table><thead><tr><th>Sequence Name</th><th>Service</th><th>Tolerance</th></tr></thead><tbody><tr><td>Connor Sequence</td><td>Universal</td><td>0.50</td></tr><tr><td>Quick Sequence</td><td>2-Wire, 1 Ph</td><td>0.50</td></tr></tbody></table><p>ADD EDIT DELETE BACK</p></div></div>	Sequence Name	Service	Tolerance	Connor Sequence	Universal	0.50	Quick Sequence	2-Wire, 1 Ph	0.50	<p>Add, edit, and delete test sequences. This allows the user a certain level of customization in the sequence. In adding or editing a test sequence, the user can re-arrange the tests with the MOVE DOWN and MOVE UP buttons.</p>						
Sequence Name	Service	Tolerance														
Connor Sequence	Universal	0.50														
Quick Sequence	2-Wire, 1 Ph	0.50														
<div><div>KEYPAD & FUNCTION KEYS:</div><table><tr><td>F1</td><td></td><td></td></tr><tr><td>F2</td><td>ADD</td><td>Add new test sequence.</td></tr><tr><td>F3</td><td>EDIT</td><td>Edit a test sequence.</td></tr><tr><td>F4</td><td>DELETE</td><td>Delete a test sequence.</td></tr><tr><td>F5</td><td>BACK</td><td>Return to previous screen.</td></tr></table></div>	F1			F2	ADD	Add new test sequence.	F3	EDIT	Edit a test sequence.	F4	DELETE	Delete a test sequence.	F5	BACK	Return to previous screen.	
F1																
F2	ADD	Add new test sequence.														
F3	EDIT	Edit a test sequence.														
F4	DELETE	Delete a test sequence.														
F5	BACK	Return to previous screen.														
<div><p>Press to return to the previous screen.</p></div>																
<div><div>NEW SEQUENCE LIBRARY</div><div><p>Create a new sequence with a pre-defined</p></div></div>																

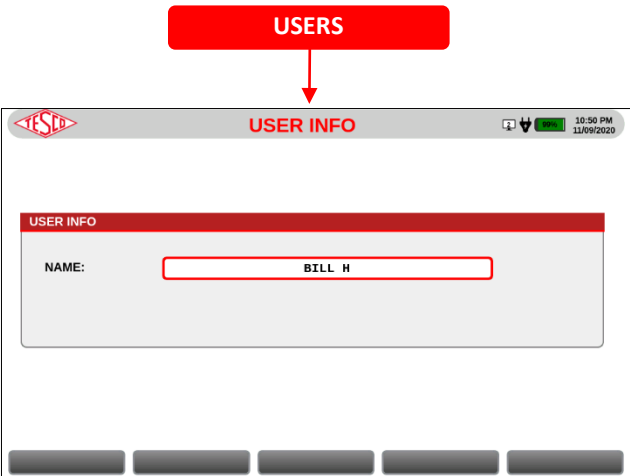
3.3.3.4 Settings

SCREEN	DESCRIPTION															
<div><div>SETTINGS</div><div></div></div>	<p>Change or update the options and settings for the device.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><tr><td>F1</td><td>GENERAL</td><td>Adjust screen brightness options and select method of assigning IP address.</td></tr><tr><td>F2</td><td>USERS</td><td>View name of user or technician.</td></tr><tr><td>F3</td><td>COLORS/BEEPER</td><td>Change phase color assignments.</td></tr><tr><td>F4</td><td>TESTING</td><td>Set global testing options.</td></tr><tr><td>F5</td><td></td><td></td></tr></table> <p>Press  to return to the previous screen.</p>	F1	GENERAL	Adjust screen brightness options and select method of assigning IP address.	F2	USERS	View name of user or technician.	F3	COLORS/BEEPER	Change phase color assignments.	F4	TESTING	Set global testing options.	F5		
F1	GENERAL	Adjust screen brightness options and select method of assigning IP address.														
F2	USERS	View name of user or technician.														
F3	COLORS/BEEPER	Change phase color assignments.														
F4	TESTING	Set global testing options.														
F5																

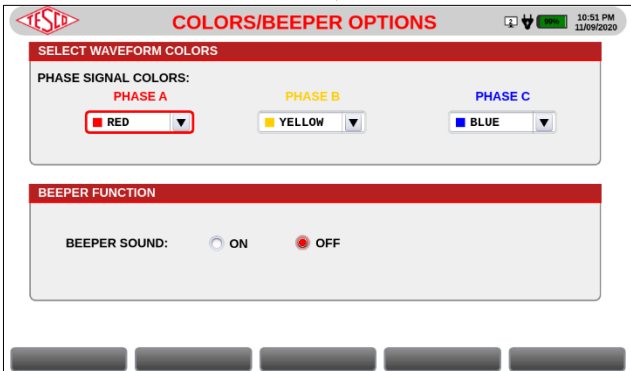

3.3.3.4a General Options

SCREEN	DESCRIPTION																										
<div><div>GENERAL OPTIONS</div><div><div><div>GENERAL OPTIONS</div><div><div>DISPLAY BRIGHTNESS</div><div>BRIGHTNESS LEVEL: <input type="checkbox"/> AUTO ADJUST 44 %</div></div><div><div>DATE AND TIME</div><div>TIMEZONE: UTC TIME: 12:03:40 AM DATE: 01/01/2000</div></div></div><div><div>NETWORK</div></div></div></div> <div><div><div>GENERAL OPTIONS</div><div><div>DISPLAY BRIGHTNESS</div><div>BRIGHTNESS LEVEL: <input type="checkbox"/> AUTO ADJUST 44 %</div></div><div><div>DATE AND TIME</div><div>TIMEZONE: UTC TIME: 3:45 AM DATE: 01/01/2000</div></div></div><div><div>NETWORK SETUP</div><div><div><input type="checkbox"/> DHCP <input checked="" type="checkbox"/> STATIC 192.168.43.9</div><div>ENTER CANCEL</div></div></div></div>	<p>Select how the brightness level of the screen is managed and change network settings.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><tr><td>F1</td><td>NETWORK</td><td>Shows a pop-up that allows changing the network settings.</td></tr><tr><td>F2</td><td></td><td></td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td></td><td></td></tr><tr><td>F5</td><td></td><td></td></tr></table> <p>DATA</p> <table><tr><td>BRIGHTNESS LEVEL</td><td colspan="2">Manually set brightness level of screen. The user can choose to auto-adjust the brightness level or set a certain level for it.</td></tr><tr><td>TIMEZONE</td><td colspan="2">Select a timezone for the site anazlyer. The time and date are automatically updated once a timezone is selected.</td></tr><tr><td rowspan="2">IP ADDRESS</td><td>DHCP</td><td>Select for IP address assigned by the network</td></tr><tr><td>STATIC</td><td>Select for IP address specified by the user</td></tr></table> <p>Press to return to the previous screen.</p>	F1	NETWORK	Shows a pop-up that allows changing the network settings.	F2			F3			F4			F5			BRIGHTNESS LEVEL	Manually set brightness level of screen. The user can choose to auto-adjust the brightness level or set a certain level for it.		TIMEZONE	Select a timezone for the site anazlyer. The time and date are automatically updated once a timezone is selected.		IP ADDRESS	DHCP	Select for IP address assigned by the network	STATIC	Select for IP address specified by the user
F1	NETWORK	Shows a pop-up that allows changing the network settings.																									
F2																											
F3																											
F4																											
F5																											
BRIGHTNESS LEVEL	Manually set brightness level of screen. The user can choose to auto-adjust the brightness level or set a certain level for it.																										
TIMEZONE	Select a timezone for the site anazlyer. The time and date are automatically updated once a timezone is selected.																										
IP ADDRESS	DHCP	Select for IP address assigned by the network																									
	STATIC	Select for IP address specified by the user																									

3.3.3.4b Users

SCREEN	DESCRIPTION
	Displays the technician's or user's name. The username will also be shown in the main menu after bootup.

3.3.3.4c Colors/Beeppers Options

SCREEN	DESCRIPTION																								
<div><div>COLORS/BEEPER OPTIONS</div><div></div></div>	<p>Choose colors for displaying each phase’s data in the system. All phase color coding and plots are affected.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><tr><td>F1</td><td></td><td></td></tr><tr><td>F2</td><td></td><td></td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td></td><td></td></tr><tr><td>F5</td><td>SAVE</td><td>Save the changes made on the colors/beeper settings.</td></tr></table> <p>Press  to return to the previous screen.</p> <p>DATA</p> <table><tr><td>PHASE SIGNAL COLORS</td><td colspan="2">Choose signal colors for Phase A, B, and C</td></tr><tr><td>BEEPER SOUND</td><td>ON</td><td>Select to turn on beeper sound</td></tr><tr><td></td><td>OFF</td><td>Select to turn off beeper sound</td></tr></table>	F1			F2			F3			F4			F5	SAVE	Save the changes made on the colors/beeper settings.	PHASE SIGNAL COLORS	Choose signal colors for Phase A, B, and C		BEEPER SOUND	ON	Select to turn on beeper sound		OFF	Select to turn off beeper sound
F1																									
F2																									
F3																									
F4																									
F5	SAVE	Save the changes made on the colors/beeper settings.																							
PHASE SIGNAL COLORS	Choose signal colors for Phase A, B, and C																								
BEEPER SOUND	ON	Select to turn on beeper sound																							
	OFF	Select to turn off beeper sound																							

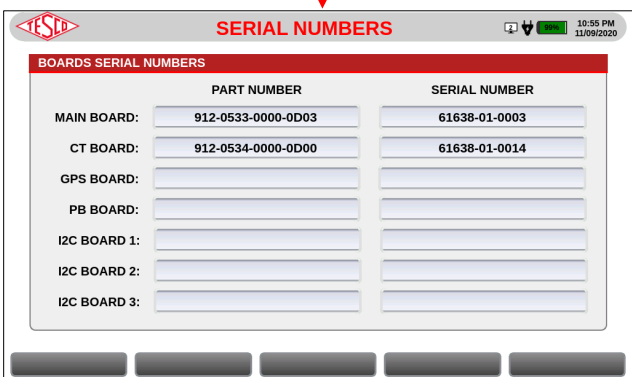

3.3.3.4d Testing Options

SCREEN	DESCRIPTION																	
<div><div>TESTING OPTIONS</div><div></div></div>	<p>Set an option whether to define a delay between tests in a sequence; wait until a user presses continue; or have no delay at all and have the succeeding test execute immediately. The user can also set the default defined limits for CT testing.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><tr><td>F1</td><td></td><td></td></tr><tr><td>F2</td><td></td><td></td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td></td><td></td></tr><tr><td>F5</td><td>SAVE</td><td>Save the changes made on the testing options. This will be enabled once there are changes.</td></tr></table> <p>Press to return to the previous screen.</p> <p>DATA</p> <table><tr><td>DEFAULT USER DEFINED LIMITS</td><td>Select the default user-defined limits for all the CT tests.</td></tr></table>	F1			F2			F3			F4			F5	SAVE	Save the changes made on the testing options. This will be enabled once there are changes.	DEFAULT USER DEFINED LIMITS	Select the default user-defined limits for all the CT tests.
F1																		
F2																		
F3																		
F4																		
F5	SAVE	Save the changes made on the testing options. This will be enabled once there are changes.																
DEFAULT USER DEFINED LIMITS	Select the default user-defined limits for all the CT tests.																	

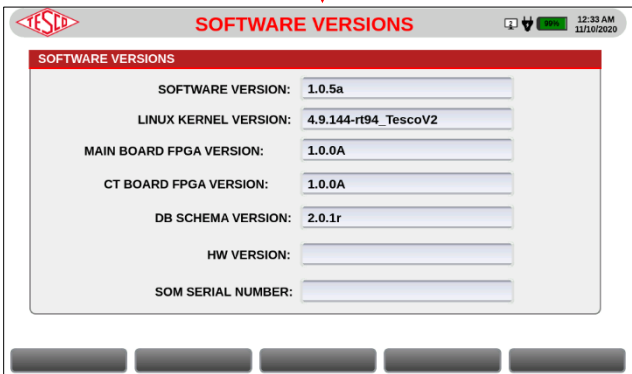

3.3.3.5 System Information

SCREEN	DESCRIPTION															
<div><div>SYSTEM INFO</div><div></div></div>	<p>This contains information on the user, temperature, load box, controllers, and operating system of the Site Analyzer.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table><tr><td>F1</td><td>USER</td><td>View/Edit user's name and time and date settings.</td></tr><tr><td>F2</td><td>TEMPS</td><td>Check temperature of the circuit, CTs, and battery.</td></tr><tr><td>F3</td><td>CONFIGURATION</td><td>View configurations for current, frequency, thermal, and feedback settings.</td></tr><tr><td>F4</td><td>SERIAL NUMS</td><td>View serial number of the system's PC boards.</td></tr><tr><td>F5</td><td>SW VERSIONS</td><td>View detailed information of the software.</td></tr></table> <p>Press to return to the previous screen.</p>	F1	USER	View/Edit user's name and time and date settings.	F2	TEMPS	Check temperature of the circuit, CTs, and battery.	F3	CONFIGURATION	View configurations for current, frequency, thermal, and feedback settings.	F4	SERIAL NUMS	View serial number of the system's PC boards.	F5	SW VERSIONS	View detailed information of the software.
F1	USER	View/Edit user's name and time and date settings.														
F2	TEMPS	Check temperature of the circuit, CTs, and battery.														
F3	CONFIGURATION	View configurations for current, frequency, thermal, and feedback settings.														
F4	SERIAL NUMS	View serial number of the system's PC boards.														
F5	SW VERSIONS	View detailed information of the software.														

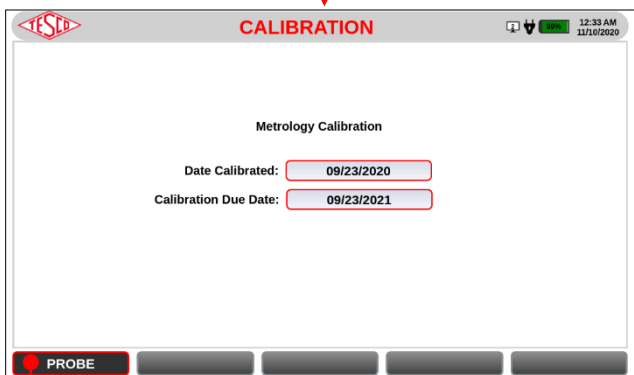

3.3.3.5c Serial Numbers

SCREEN	DESCRIPTION				
<p style="text-align: center;">SERIAL NUMBERS</p> 	<p>This contains the serial numbers of the controllers.</p> <p>DATA</p> <table> <tr> <td>PART NUMBER</td><td>Part number of the listed boards</td></tr> <tr> <td>SERIAL NUMBER</td><td>Serial number of the listed boards</td></tr> </table> <p>Press  to return to the previous screen.</p>	PART NUMBER	Part number of the listed boards	SERIAL NUMBER	Serial number of the listed boards
PART NUMBER	Part number of the listed boards				
SERIAL NUMBER	Serial number of the listed boards				

3.3.3.5d Software Versions

SCREEN	DESCRIPTION														
<p style="text-align: center;">SOFTWARE VERSIONS</p> 	<p>This contains the information on the Linux operating system.</p> <p>DATA</p> <table> <tr> <td>FIRMWARE VERSION</td><td>Firmware version of the software</td></tr> <tr> <td>LINUX KERNEL VERSION</td><td>Linux kernel version of the software</td></tr> <tr> <td>MAIN BOARD FPGA SW VERSION</td><td>Software version of the FPGA main board</td></tr> <tr> <td>CT BOARD FPGA SW VERSION</td><td>Software version of the FPGA CT board</td></tr> <tr> <td>DB SCHEMA VERSION</td><td>Database version</td></tr> <tr> <td>HW VERSION</td><td>Hardware version</td></tr> <tr> <td>SOM SERIAL NUMBER</td><td>Serial number of SOM</td></tr> </table> <p>Press  to return to the previous screen.</p>	FIRMWARE VERSION	Firmware version of the software	LINUX KERNEL VERSION	Linux kernel version of the software	MAIN BOARD FPGA SW VERSION	Software version of the FPGA main board	CT BOARD FPGA SW VERSION	Software version of the FPGA CT board	DB SCHEMA VERSION	Database version	HW VERSION	Hardware version	SOM SERIAL NUMBER	Serial number of SOM
FIRMWARE VERSION	Firmware version of the software														
LINUX KERNEL VERSION	Linux kernel version of the software														
MAIN BOARD FPGA SW VERSION	Software version of the FPGA main board														
CT BOARD FPGA SW VERSION	Software version of the FPGA CT board														
DB SCHEMA VERSION	Database version														
HW VERSION	Hardware version														
SOM SERIAL NUMBER	Serial number of SOM														

3.3.3.5e Calibration

SCREEN	DESCRIPTION																																																												
<div><div><div>CALIBRATION</div><div></div></div><div><div><div>Probe Calibration</div><div><table><tr><td></td><td>PROBE A</td><td>PROBE B</td><td>PROBE C</td></tr><tr><td>MODEL:</td><td></td><td></td><td></td></tr><tr><td>SERIAL #:</td><td></td><td></td><td></td></tr><tr><td>TYPE:</td><td></td><td></td><td></td></tr><tr><td>RANGE 1:</td><td></td><td></td><td></td></tr><tr><td>RANGE 2:</td><td></td><td></td><td></td></tr><tr><td>RANGE 3:</td><td></td><td></td><td></td></tr></table></div><div>METROLOGY</div></div></div></div> <div><p>Shows calibration details of the site analyzer. Should the site analyzer need recalibration, please contact TESCO. Contact details are found in section 1.2 Contacting TESCO.</p><p>KEYPAD & FUNCTION KEYS:</p><table><tr><td>F1</td><td>PROBE</td><td rowspan="2">Switch between showing probe or metrology calibration details.</td></tr><tr><td></td><td>METROLOGY</td></tr><tr><td>F2</td><td></td><td></td></tr><tr><td>F3</td><td></td><td></td></tr><tr><td>F4</td><td></td><td></td></tr><tr><td>F5</td><td></td><td></td></tr></table><p>Press  to return to the previous screen.</p><p>DATA</p><table><tr><td>DATE CALIBRATED</td><td>Date when the site analyzer was las calibrated.</td></tr><tr><td>CALIBRATION DUE DATE</td><td>Due date indicating when the site analyzer should be recalibrated.</td></tr><tr><td>MODEL</td><td>Probe model</td></tr><tr><td>SERIAL #</td><td>Probe serial number</td></tr><tr><td>TYPE</td><td>Probe type</td></tr><tr><td>RANGE 1</td><td>TBD</td></tr><tr><td>RANGE 2</td><td>TBD</td></tr><tr><td>RANGE 3</td><td>TBD</td></tr></table></div>		PROBE A	PROBE B	PROBE C	MODEL:				SERIAL #:				TYPE:				RANGE 1:				RANGE 2:				RANGE 3:				F1	PROBE	Switch between showing probe or metrology calibration details.		METROLOGY	F2			F3			F4			F5			DATE CALIBRATED	Date when the site analyzer was las calibrated.	CALIBRATION DUE DATE	Due date indicating when the site analyzer should be recalibrated.	MODEL	Probe model	SERIAL #	Probe serial number	TYPE	Probe type	RANGE 1	TBD	RANGE 2	TBD	RANGE 3	TBD
	PROBE A	PROBE B	PROBE C																																																										
MODEL:																																																													
SERIAL #:																																																													
TYPE:																																																													
RANGE 1:																																																													
RANGE 2:																																																													
RANGE 3:																																																													
F1	PROBE	Switch between showing probe or metrology calibration details.																																																											
	METROLOGY																																																												
F2																																																													
F3																																																													
F4																																																													
F5																																																													
DATE CALIBRATED	Date when the site analyzer was las calibrated.																																																												
CALIBRATION DUE DATE	Due date indicating when the site analyzer should be recalibrated.																																																												
MODEL	Probe model																																																												
SERIAL #	Probe serial number																																																												
TYPE	Probe type																																																												
RANGE 1	TBD																																																												
RANGE 2	TBD																																																												
RANGE 3	TBD																																																												

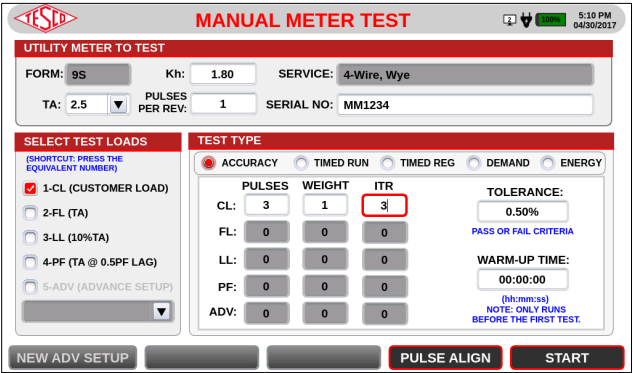
4.0 CONFIGURATIONS

4.1 Meter Test..... 40

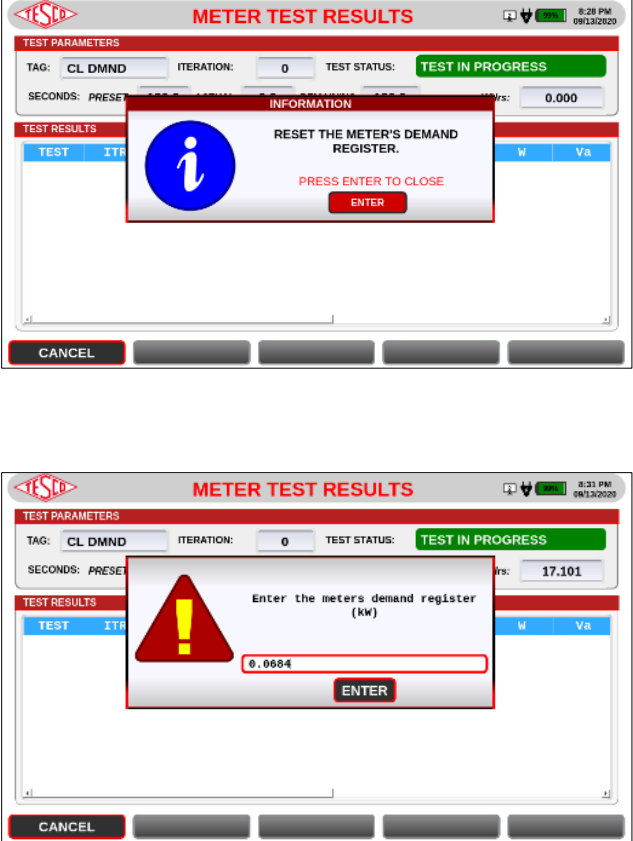
4.2 CT Test..... 40

4.3 Sequence Test 42

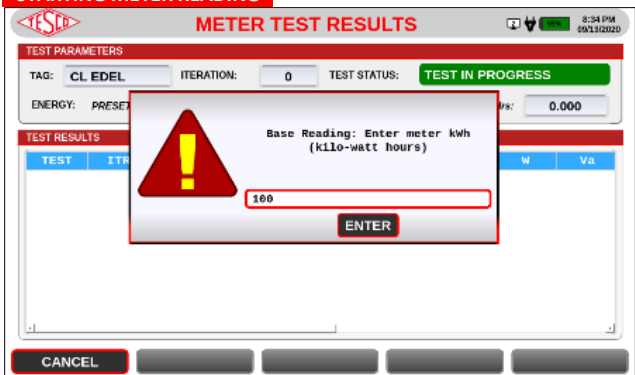
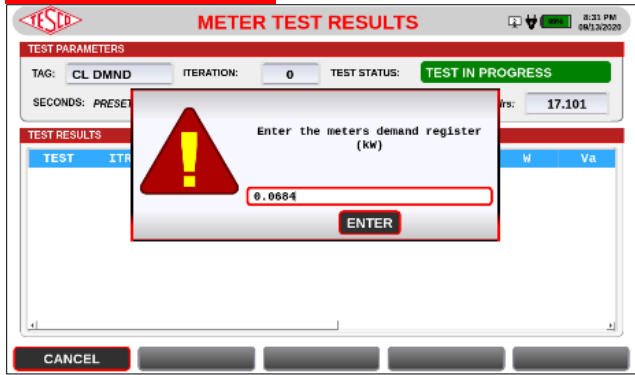
4.1 Meter Test

SCREEN	DESCRIPTION
	<p>HOW TO PERFORM METER TEST:</p> <ol style="list-style-type: none">1. If a site was preselected, the test parameters will be automatically filled in. Otherwise, manually input the parameters and select the test load and test type.2. If an optical probe is attached to the meter, the meter’s pulse output can be aligned by pressing F3 [PULSE ALIGN]. It will display the Pulse Alignment Check screen.3. Once everything is set, press F4 [START] to start the test.4. Depending on the test type, a pop-up will appear to ask the user to enter a certain value. For example, in the Demand Test, a user will be asked to enter the meter’s demand register (kW) to continue with the test.5. The test will end with the test results shown.

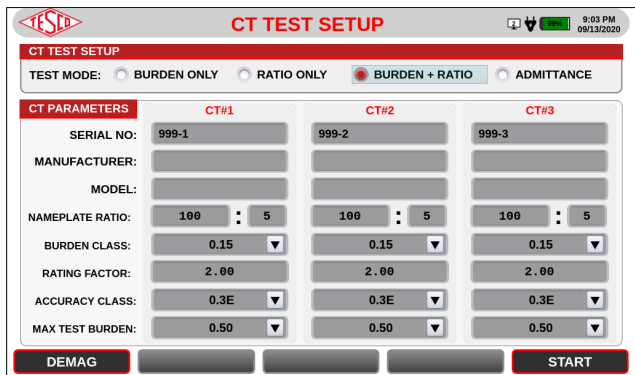
4.1.1 Demand Test

SCREEN	DESCRIPTION
	<p>HOW TO PERFORM DEMAND METER TEST:</p> <ol style="list-style-type: none">1. Press F4 [START].2. Reset the demand register in the meter.3. The Site Analyzer will deliver current to the meter for one sub-interval.4. Read the meter’s demand register and enter the value.5. The Site Analyzer will compute the full interval demand and calculate the registration.

4.1.1 Energy Test

SCREEN	DESCRIPTION
<p>STARTING METER READING</p>  <p>ENDING METER READING</p> 	<p>HOW TO PERFORM ENERGY METER TEST:</p> <ol style="list-style-type: none"> 1. Press F4 [START]. 2. Enter meter kWh.

4.2 CT Test

SCREEN	DESCRIPTION
	<p>HOW TO PERFORM A CT TEST:</p> <ol style="list-style-type: none"> 1. Select a CT Test type: <ul style="list-style-type: none"> • Burden Only • Ratio Only • Ratio with Added Burden • Admittance 2. After selecting a CT Test Type, enter CT information. If all CTs have the same information, press F2 [COPY 1 TO ALL] to copy the information (except serial number) from CT #1 to the other CTs. 3. If a site was selected, the fields will be automatically filled in. 4. Optional: Demagnetize the CTs by pressing F1 [DEMAG]. This will perform Demag Test to return the CT accuracy to its normal state. 5. Once everything is set, press F5 [START] to start the CT Test. 6. Live results will be shown on the CT Test Results screen, and the data plotting will vary depending on the selected test type.

4.3 Sequence Test

SCREEN

SEQUENCE SETUP

TEST SEQUENCE SETUP

SEQUENCE NAME: SEQUENCE 1

TOLERANCE: 0.50 TA: 2.50 SERVICE: 4-Wire, Wye

ENA TAG TEST DESCRIPTION

☒ SSCAN SITE SCAN

☐ BUR CT BURDEN ONLY TEST

☐ RATIO CT RATIO ONLY TEST

☒ RxB CT RATIO WITH BURDEN TEST

☒ ADM CT ADMITTANCE TEST

☒ DEMAG CT DEMAG TEST

SETUP

RUN

SEQUENCE SETUP

TEST SEQUENCE SETUP

SEQUENCE NAME: SEQUENCE 1

TOLERANCE: 0.50%

PASS OR FAIL CRITERIA

ENA TAG TEST DESCRIPTION

☒ SSCAN SITE SCAN

☐ BUR CT BURDEN ONLY TEST

☐ RATIO CT RATIO ONLY TEST

☒ RxB CT RATIO WITH BURDEN TEST

☒ ADM CT ADMITTANCE TEST

☒ DEMAG CT DEMAG TEST

SETUP

RUN

SEQUENCE RESULTS SUMMARY

SEQUENCE PARAMETERS

SEQUENCE NAME: SEQUENCE 1 SERVICE: 4-Wire, Wye

CT TEST RESULTS

TEST	PHASE	TYPE	P/F	Max Burden With Ratio	Bur 0: Ratio	Bur 0: Ratio
0	A	Burden Only Test	NO	0.50	NO	99.894
0	B	Burden Only Test	NO	0.50	NO	100.644
0	C	Burden Only Test	NO	0.50	NO	100.428
1	A	Ratio Only Test	NO	0.00	YES	99.907
1	B	Ratio Only Test	NO	0.00	YES	100.645
1	C	Ratio Only Test	NO	0.00	YES	100.415
2	A	Burden And Ratio Test	NO	0.50	YES	99.894
2	B	Burden And Ratio Test	NO	0.50	YES	100.642
2	C	Burden And Ratio Test	NO	0.50	YES	100.425

METER RESULTS

SAVE

DESCRIPTION

HOW TO PERFORM SEQUENCE TESTING:

1. Select a site in the Main Menu. This is required before Sequence Setup can be accessed.
2. Set the Sequence Name and Tolerance for the pass or fail criteria. The TA and Service can't be changed as they were already configured in the chosen site.
3. Select the tests that will be included in the sequence. Press **←** or **→** to go to the list and press the tab buttons or navigation buttons to move to each test.
4. Press **ENTER** to select or deselect a test. Tests that will not be included in the sequence are grayed out.
5. If any of the meter test is included, press **F3** [SETUP] to configure. This is only available for meter tests.
6. When everything is set, press **F5** [RUN] to start the sequence test. This will show the live reading of the results for the first test in the sequence, which in this case is Site Scan.
7. Once the test is completed, press **F5** [CONTINUE] to proceed to the next test in the sequence.
Note: This setting can be changed (refer to section 3.3.3.4d **Testing Options**) where the sequence can have no delays or have a defined duration of the delay before proceeding to the next test.
8. If the test needs to be canceled, press **F1** [CANCEL]. This will cancel the whole sequence test and will proceed to the Sequence Setup screen.
9. Once the whole sequence is finished, it will show the Sequence Results Summary screen. Press **F1** [METER RESULTS / CT RESULTS] to switch between CT Test Results and Meter Test results.
10. Press **F5** [SAVE] to save the test results. View them again later by going to the Main Menu > Database.

5.0 MAINTENANCE

5.1 Introduction	44
5.2 Cleaning the Instrument External Surface.....	44
5.3 Repair / Parts Replacement / Recalibration.....	44

5.1 Introduction

This chapter explains how to perform the routine user maintenance required to your Site Analyzer in optimal operating condition.

5.2 Cleaning the Instrument External Surface

Clean the exterior of the Site Analyzer using a soft cloth slightly dampened with either water or a non-abrasive mild cleaning solution that is not harmful to plastics.



Do not use hydrocarbons or chlorinated solvents for cleaning. They can damage the plastic materials used in the Site Analyzer.

5.3 Repair / Parts Replacement / Recalibration

For the Site Analyzer's repair, parts replacement, and recalibration, directly contact TESCO through phone or email. See section **1.2 Contacting TESCO** for contact details. TESCO recommends recalibration on an annual basis. Further details can be found on the Calibration Certificate provided with your Site Analyzer.